



3" Extension Die Grinders

Models: 53510, 53511, 53512, 53513

96211 – Bearing Removal Tool

- Use to remove the 01015 Bearing from the Rear Bearing Plate

96241 – Bearing Press Tool

- Use to install the 01015 Bearing into the Rear Bearing Plate and to install the plate with bearing onto the rotor.

96419 – Bearing Press Tool

- Use the raised center to install 51078 Bearings onto the extension spindle.

96418 – Bearing Press Tool

- Use the raised outside edge to install 51078 Bearings into the spindle housing.

Visit Our Website: www.dynabrade.com

Email: customer.service@dynabrade.com

DYNABRADE, INC. • DYNABRADE INTERNATIONAL

8989 Sheridan Drive, Clarence, New York 14031-1490 USA
Telephone: (716) 631-0100 • Fax: 716-631-2073 • Int'l Fax: 716-631-2524

DYNABRADE DO BRASIL

Rua Oneda, 632, Sao Bernardo do Campo • SP – CEP 09895-280
Telephone: 55-11-4390-0133 • Fax: 55-11-4399-1067

DYNABRADE EUROPE S.à.r.l.

Zone Artisanale, L-5485 Wormeldange—Haut, Luxembourg
Telephone: +352 768 494 1 • Fax: +352 768 495

DYNABRADE INDIA ABRASIVE POWER TOOLS Pvt Ltd.

EL-54, TTC Industrial Area, M.I.D.C. Mahape, Electronic Zone, Navi Mumbai - 400705
Maharashtra, India • Telephone: +91 22 2763 2226 • Fax: +91 22 2763 2228