



## ***Special Tools for Repair***

---

### **0.7 hp. RA, Composite and Steel Housing, Extension Cut-Off Tools**

#### **Models: ALL**

##### **96346 - Bearing Separator (2")**

- Use air motor disassembly, bearing and gear removal.

##### **96232 - Arbor Press (#2)**

- Use to disassemble and assemble, air motor and subassemblies.

##### **96213 - Bearing Removal Tool**

- Use to remove motor bearing from rear bearing plate.

##### **59071 - Lock Ring Wrench**

##### **95262 - 14 mm Open-End Wrench**

##### **96240 - Bearing Press Tool**

##### **96239 - Bearing Press Tool**

##### **95900 - Regulator Plug Wrench**

- Use to remove and install the 01026 Regulator Plug on Steel Housing Models.

*Visit Our Website: [www.dynabrade.com](http://www.dynabrade.com)*

*Email: [customer.service@dynabrade.com](mailto:customer.service@dynabrade.com)*

---

#### **DYNABRADE, INC. • DYNABRADE INTERNATIONAL**

8989 Sheridan Drive, Clarence, New York 14031-1490 USA  
Telephone: (716) 631-0100 • Fax: 716-631-2073 • Int'l Fax: 716-631-2524

#### **DYNABRADE DO BRASIL**

Rua Oneda, 632, Sao Bernardo do Campo • SP – CEP 09895-280  
Telephone: 55-11-4390-0133 • Fax: 55-11-4399-1067

#### **DYNABRADE EUROPE S.à.r.l.**

Zone Artisanale, L-5485 Wormeldange—Haut, Luxembourg  
Telephone: +352 768 494 1 • Fax: +352 768 495

#### **DYNABRADE INDIA ABRASIVE POWER TOOLS Pvt Ltd.**

EL-54, TTC Industrial Area, M.I.D.C. Mahape, Electronic Zone, Navi Mumbai - 400705  
Maharashtra, India • Telephone: +91 22 2763 2226 • Fax: +91 22 2763 2228