



Special Tools for Repair

0.7 hp. RA, Composite and Steel Housing, Extension Wheel Grinders

Models: ALL

96346 - Bearing Separator (2")

- Use air motor disassembly, bearing and gear removal.

96232 - Arbor Press (#2)

- Use to disassemble and assemble, air motor and subassemblies.

96213 - Bearing Removal Tool

- Use to remove motor bearing from rear bearing plate.

59071 - Lock Ring Wrench

95262 - 14 mm Open-End Wrench

96240 - Bearing Press Tool

96239 - Bearing Press Tool

95900 - Regulator Plug Wrench

- Use to remove and install the 01026 Regulator Plug on Steel Housing Models.

Visit Our Website: www.dynabrade.com

Email: customer.service@dynabrade.com

DYNABRADE, INC. • DYNABRADE INTERNATIONAL

8989 Sheridan Drive, Clarence, New York 14031-1490 USA
Telephone: (716) 631-0100 • Fax: 716-631-2073 • Int'l Fax: 716-631-2524

DYNABRADE DO BRASIL

Rua Oneda, 632, Sao Bernardo do Campo • SP – CEP 09895-280
Telephone: 55-11-4390-0133 • Fax: 55-11-4399-1067

DYNABRADE EUROPE S.à.r.l.

Zone Artisanale, L-5485 Wormeldange—Haut, Luxembourg
Telephone: +352 768 494 1 • Fax: +352 768 495

DYNABRADE INDIA ABRASIVE POWER TOOLS Pvt Ltd.

EL-54, TTC Industrial Area, M.I.D.C. Mahape, Electronic Zone, Navi Mumbai - 400705
Maharashtra, India • Telephone: +91 22 2763 2226 • Fax: +91 22 2763 2228