VirtuScaler

Air Motor and Machine Parts

Model:

31600 — 3" Floor Model

AWARNING

Always operate, inspect and maintain this tool in accordance with the Safety Code for portable air tools (ANSI B186.1) and any other applicable safety codes and regulations. Please refer to Dynabrade's Warning/Safety Operating Instructions for more complete safety information.


Index Key									
	Part #	Description							
1	97007	Screw (3)	18	95178	Screw (4)				
2	32002	Housing Cover	19	31601	Bracket (2)				
3	95715	Screw	20	31620	Edge Guide Assy.				
4	31010	Washer	21	95039	Thumb Screw (2)				
5	31009	Flange	22	95182	Bolts (4)				
6	31013	Flange	23	95167	Lock Washer (2)				
7	39030	Wheel Assembly	24	95158	Bolt (2)				
8	39011A	Short Ring	25	31100	Handle Assembly				
9	33043	3" Keeper Pin (20)		`	#23, 24, 26, 27 and				
10	39032	3" Hub	 		Handle Rod)				
11	39011B	Long Ring	26	95169	Sponge Grip				
12	32001	Housing	27	31101	U Handle				
13	31005	Cam (4)	28	95195	25 lbs. Weight				
14	95167	Lock Washer (4)	29	32003	Wheel Arbor				
15	95179	Bolt (4)	30	01049	Motor				
16	31004	Roller (2)	31	32100	Muffler				
17	31006	Bearing (4)	32	95828	Adapter				

Please Indicate:

Model #, **Serial** #, and **RPM** when ordering replacement parts. Use only genuine Dynabrade replacement parts.

20 7 25 26 8 10 11 24 25 26 27 29	32
2)	31
	17)

Machine	Length	Weight	Spindle	Roto-Peen Size	Air Flow Rate	Sound	Motor	RPM	Air Pressure
Number	Inch (mm)	Pounds (kg)	Thread	Inch (mm)	SCFM (LPM)	Level	HP (W)	(Loaded)	PSI (Bars)
31600	8-3/4" (222)	54 lbs. (24.5)	1/2"-20 male	3" (76.2)W	279 (7,900)	94 dBA	4 (3,000)	1,650	60 (4.1)

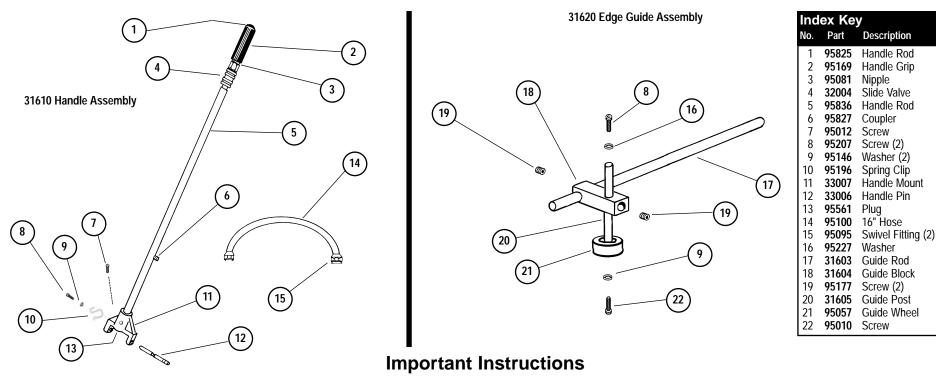

Carefully read all instructions before operating or servicing any Dynabrade® Abrasive Power Tool.

Warning: Hand, wrist and arm injury may result from repetitive work motion and overexposure to vibration. Eye, face, respiratory, sound and body protection must be worn while operating power tools. Failure to do so may result in serious injury or death. Follow safety procedures posted in workplace.

Important: All Dynabrade air tools must be used with a Filter-Regulator-Lubricator to maintain all warranties. Dynabrade recommends one drop of air lube per minute for each 10 SCFM. Dynabrade Air Lube (P/N 95842: 1pt. 473ml.) is recommended.

- Check tool speed with tachometer. If tool is operating at a higher speed than the RPM marked on the tool or operating improperly, the tool should be serviced to correct the cause before use.
- Mineral spirits are recommended when cleaning the tool and parts. Do not clean tool or parts with any solvents or oils containing acids, esters, keytones, chlorinated hydrocarbons or nitro carbons.

Safety Instructions:







- Important: User of tool is responsible for following accepted safety codes such as those published by the American National Standards Institute (ANSI).
- Operate machine for one minute before application to workpiece to determine if machine is working properly and safely before work begins.
- Always disconnect power supply before changing abrasive/accessory or making machine adjustments.
- Inspect abrasives/accessories for damage or defects prior to installation on tools.
- Please refer to Dynabrade's Warning/Safety Operating Instructions Tag (Reorder No. 95903) for more complete safety information.
- Warning: Hand, wrist and arm injury may result from repetitive work, motion and overexposure to vibration.

Email: Customer.Service@Dynabrade.com

DYNABRADE

Visit our Web Site: www.dynabrade.com

DYNABRADE, INC., DYNABRADE EUROPE S.àr.I.,

8989 Sheridan Drive Zone Artisanale

Clarence, NY

14031-1490

Phone: (716) 631-0100

Fax: 716-631-2073 Telephone: 352 76 84 94 1 International Fax: 716-631-2524 Fax: 352 76 84 95 1

© DYNABRADE. INC., 2000

L-5485 Wormeldange—Haut, Luxembourg

PRINTED IN USA