

11" Diameter, Gear-Driven Sander – 900 RPM

Models: 58040, 58041

**96232 (#2) Arbor Press**

- This arbor press is ideal for the disassembly and assembly of air motors.

**96346 2" Bearing Separator**

- Use the separator to remove gears and bearings.

**96283 Motor Repair Kit:**

- Contains special tools for disassembly/assembly.

**96213 Bearing Removal Tool**

- This tool is used to pass through the I.D. of the bearing plate and to push against the I.D. of the bearing.

96181 Pinion Wrench Tool

- Use to hold **57749** Pinion Gear.

96182 Plate/Gear Removal Tool

- Has 3/8" square socket. Use for assembly and disassembly of bearing plate and pinion gear.

Visit Our Website: www.dynabrade.com

Email: customer.service@dynabrade.com

DYNABRADE, INC. • DYNABRADE INTERNATIONAL

8989 Sheridan Drive, Clarence, New York 14031-1490 USA
Telephone: (716) 631-0100 • Fax: 716-631-2073 • Int'l Fax: 716-631-2524

DYNABRADE DO BRASIL

Rua Oneda, 632, Sao Bernardo do Campo • SP – CEP 09895-280
Telephone: 55-11-4390-0133 • Fax: 55-11-4399-1067

DYNABRADE EUROPE S.à.r.l.

Zone Artisanale, L-5485 Wormeldange—Haut, Luxembourg
Telephone: +352 768 494 1 • Fax: +352 768 495

DYNABRADE INDIA ABRASIVE POWER TOOLS Pvt Ltd.

EL-54, TTC Industrial Area, M.I.D.C. Mahape, Electronic Zone, Navi Mumbai - 400705
Maharashtra, India • Telephone: +91 22 2763 2226 • Fax: +91 22 2763 2228