

SPECIAL TOOLS FOR REPAIR

Dynabug® II
All Models

96232 (#2) Arbor Press

- This arbor press is ideal for the disassembly and assembly of air motors.




96346 2" Bearing Separator

- Use the separator to remove gears and bearings.



95266 – 3mm Hex Wrench

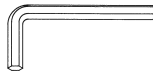

96343 Retaining Ring Pliers

- Internal/external retaining ring pliers.
Tip diameter - 0.038" (0.96mm)



57874 Repair Kit:

- Contains special tools for disassembly/assembly of machine.



57091 Bearing Press Tool

- This tool is used to push against the I.D. of the bearing.



96066 SOCKET (3/4")

- This tool is a thin wall socket specifically designed for installing and removing 69359 Muffler Caps.

