



Instructions for Greasing - Slide Board / Transfer / Planetary Assemblies


Models: 57400, 57401, 57404, 57407, 51350,

Important: Use these instructions along with tool manual.

Notice: Shut off air supply and depress throttle lever to deplete air.
Disconnect tool from air supply hose.




1. Remove **95642** Screws (2) and **95641** Hex Nuts with Phillips screwdriver.

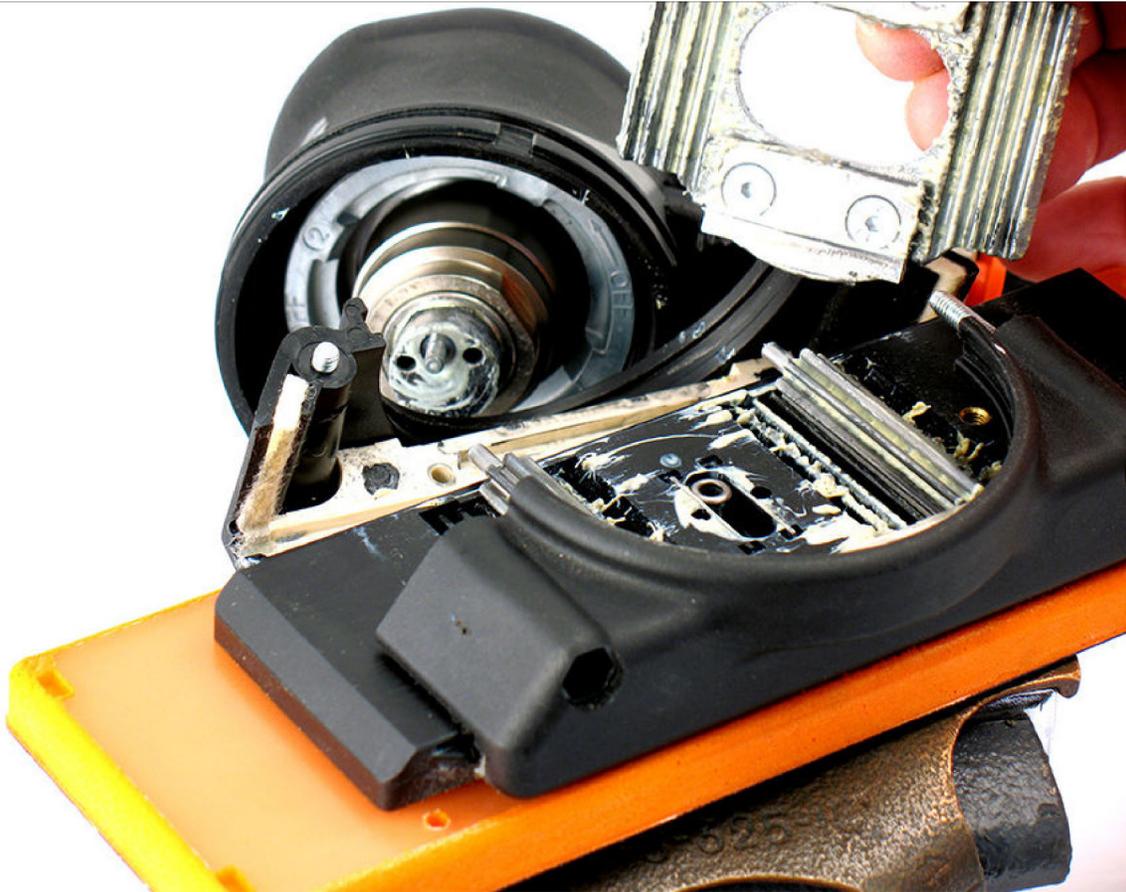


2. Separate **57427** Slider Housing halves.
 - This exposes lubrication areas in the slide board / transfer gear mechanism.
 - Refer to exploded view in tool manual.




3. To add grease to the planetary gear assembly, use **57092** Collar to hold housing in vice.

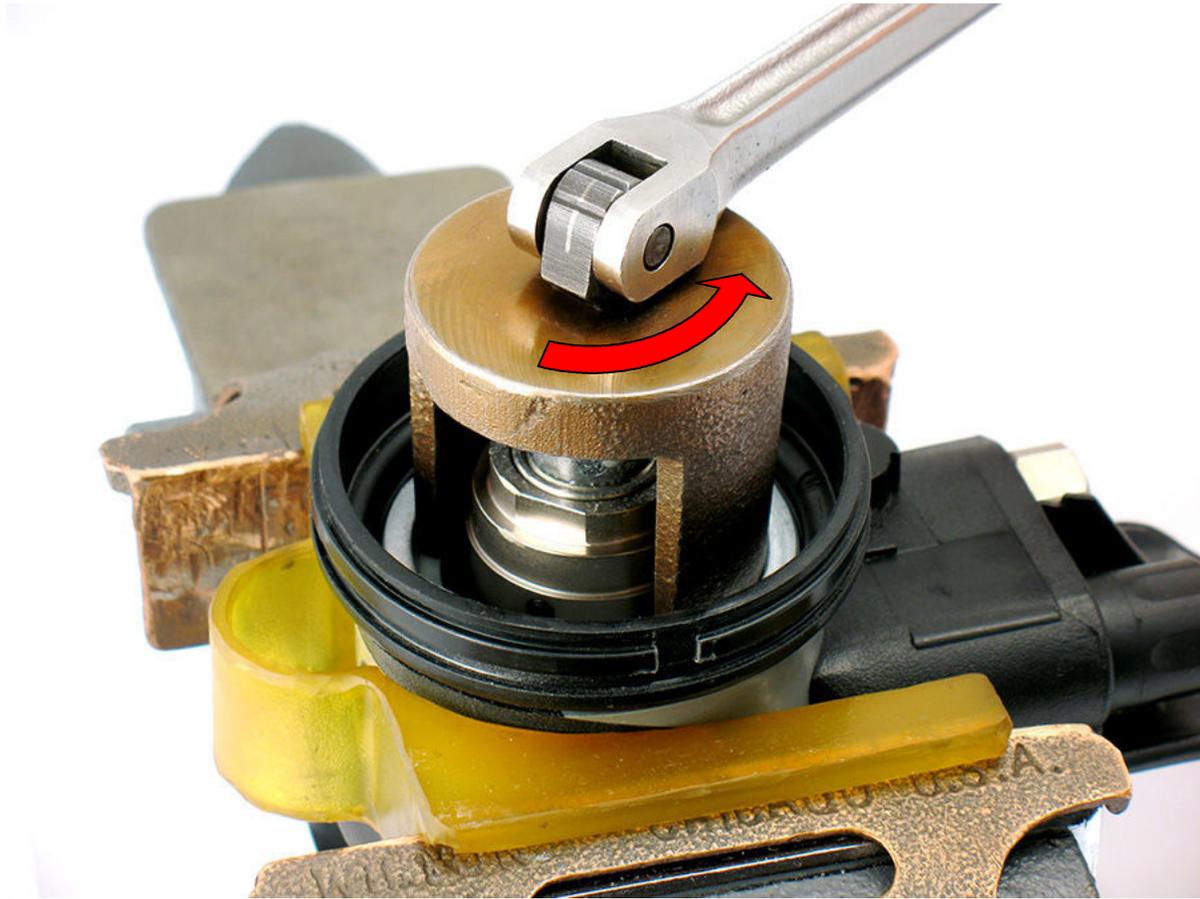

4. Use **56058** Lock Ring Wrench to remove lock ring. Turn counterclockwise.

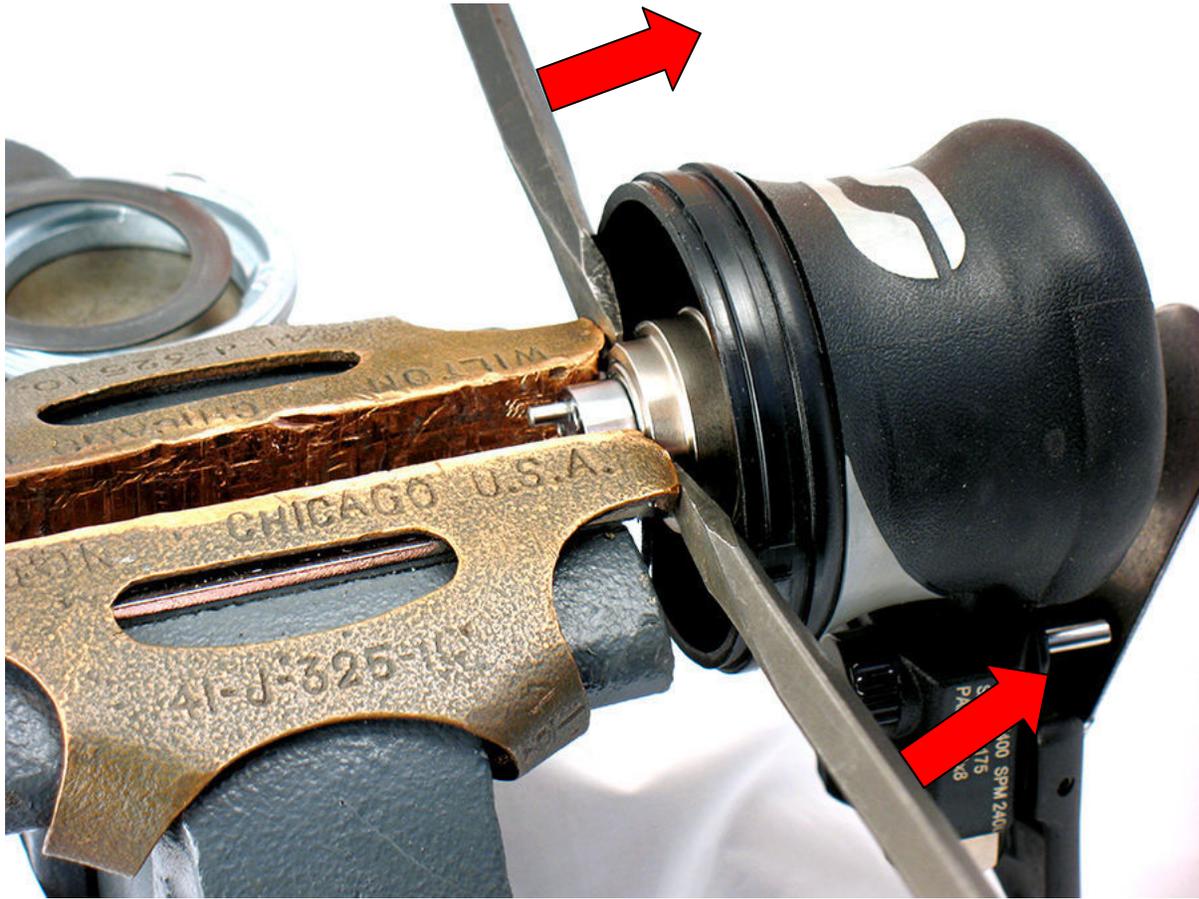

5. Remove motor from housing.

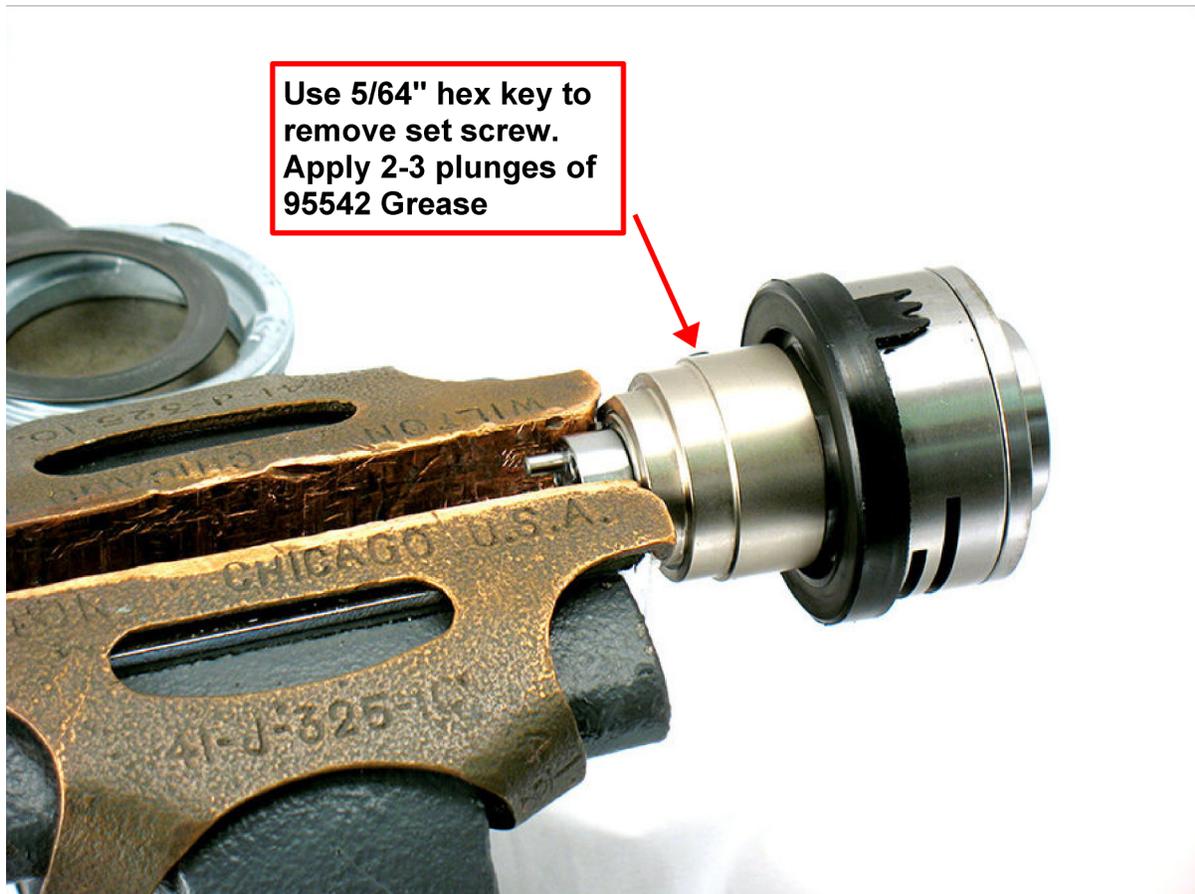

6. Use a 5/64" (2 mm) hex key to remove the **95593** Set Screw. Turn counterclockwise.
 - Use **95541** Gun to apply 2-3 plunges of **95542** Grease.

Follow tool manual instruction and reassemble in reverse order.