

11" Random Orbital Sander

Air Tool Manual – Safety, Operation and Maintenance

SAVE THIS DOCUMENT, EDUCATE ALL PERSONNEL

Models:

58480 – 11" Pad, Non-Vac







58485 – 11" Pad, Central-Vac



! WARNING

Read and understand this tool manual before operating your air tool. Follow all safety rules for the protection of operating personnel as well as adjacent areas. Always operate, inspect and maintain this tool in accordance with the American National Safety Institute (ANSI) Safety Code for Portable Air Tools – B186.1. For additional safety information, refer to Safety Requirements for the Use, Care and Protection of Abrasive Wheels – ANSI B7.1, Code of Federal Regulation – CFR 29 Part 1910, European Committee for Standards (EN) Hand Held Non-Electric Power Tools – Safety Requirements and applicable State and Local Regulations.

SAFETY LEGEND

| | | | |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|  | ! WARNING Read and understand tool manual before work starts to reduce risk of injury to operator, visitors, and tool. | ! WARNING Practice safety requirements. Work alert, have proper attire, and do not operate tools under the influence of alcohol or drugs. |  |
|  | ! WARNING Eye protection must be worn at all times, eye protection to conform to ANSI Z87.1. | ! WARNING Ear protection to be worn when exposure to sound, exceeds the limits of applicable Federal, State or local statutes, ordinances and/or regulations. |  |
|  | ! WARNING Respiratory protection to be used when exposed to contaminants that exceed the applicable threshold limit values required by law. | ! WARNING Air line hazard, pressurized supply lines and flexible hoses can cause serious injury. Do not use damaged, frayed or deteriorated air hoses and fittings. |  |

SAFETY INSTRUCTIONS

Carefully Read all instructions before operating or servicing any Dynabrade® Abrasive Power Tool.

Products offered by Dynabrade are not to be modified, converted or otherwise altered from the original design without expressed written consent from Dynabrade, Inc.

Tool Intent: 11" Random Orbital Sander are ideal for removal and polishing of materials using deburring, cleaning and polishing accessories.

Do Not Use Tool For Anything Other Than Its Intended Applications.

This power tool is not intended for use in potentially explosive atmospheres and is not insulated against contact with electrical power.

Training: Proper care, maintenance, and storage of your tool will maximize their performance.

- Employer's Responsibility – Provide 11" Random Orbital Sander operators with safety instructions and training for safe use of tools and accessories.

Accessory Selection:

- Abrasive/accessory RPM (speed) rating MUST be approved for AT LEAST the tool RPM rating.
- Before mounting an accessory, visually inspect for defects. Do not use defective accessories.
- Use only recommended accessories. See back page of manual and Dynabrade catalog.
- Follow tool specifications before choosing size and type of accessory.
- Only use recommended fittings and air line sizes. Air supply hoses and air hose assemblies must have a minimum working pressure rating of 150 PSIG (10 Bars, g) or 150 percent of the maximum pressure produced in the system, whichever is higher. (See tool Machine Specifications table.)

OPERATING INSTRUCTIONS

Warning: Always wear eye protection. Operator of tool is responsible for following: accepted eye, face, respiratory, hearing and body protection.

Caution: Hand, wrist and arm injury may result from repetitive work, motion and overexposure to vibration.

- Keep hand and clothing away from working end of the air tool.

Operation: Be sure that any loose clothing, hair and all jewelry is properly restrained.

- Secure inlet bushing on air tool with a wrench before attempting to install the air fitting to avoid damaging housing assembly.
- BEFORE MOUNTING AN ACCESSORY, after all tool repairs and whenever a 11" Random Orbital Sander is issued for use, check tool RPM (speed) with tachometer with air pressure set at 90 PSIG while the tool is running. If tool is operating at a higher speed than the RPM marked on the tool housing, or operating improperly, the tool must be serviced and corrected before use.

Caution: Tool RPM must never exceed abrasive/accessory RPM rating. Check accessory manufacturer for details on maximum operating speed or special mounting instructions.

- With power source connected at the air tool relieve hose of air pressure and disconnect tool from air supply when changing recommended accessories.
- Connect air tool to power source. Be careful NOT to depress throttle lever in the process.


Do not expose air tool to inlet pressure above 90 PSIG or (6.2 Bars).

Caution: After installing the accessory, before testing or use and/or after reassembling tool, the 11" Random Orbital Sander must be started at a reduced speed to check for good balance. Gradually increase tool speed. DO NOT USE if tool vibration is excessive. Correct cause, and retest to insure safe operation.

- Use only coated abrasive sanding discs or sheets properly secured to the backing pad provided with the air sander. Ensure that self-fixing sanding discs are mounted concentrically.
- Make sure that work area is uncluttered, and visitors are at a safe range from the tools and debris. Potentially explosive atmospheres can be caused by dust and fumes resulting from sanding or grinding. Always use dust extraction or suppression systems which are suitable for the material being processed.
- Proceed with caution in unfamiliar surroundings. Hidden hazards may exist, such as electricity or other utility lines.
- Air tools are not intended for use in explosive atmospheres and are not insulated for contact with electric power sources.
- Use a vise or clamping device to hold work piece firmly in place.
- Work may generate hazardous dust.
- Do not apply excessive force on tool or apply "rough" treatment to it.
- Always work with a firm footing, posture and proper lighting.
- Ensure that sparks and debris resulting from work do not create a hazard.
- This tool is rear exhaust. Exhaust may contain lubricants, vane material, bearing grease, and other materials flushed thru the tool.

Report to your supervisor any condition of the tool, accessories, or operation you consider unsafe.

Air System

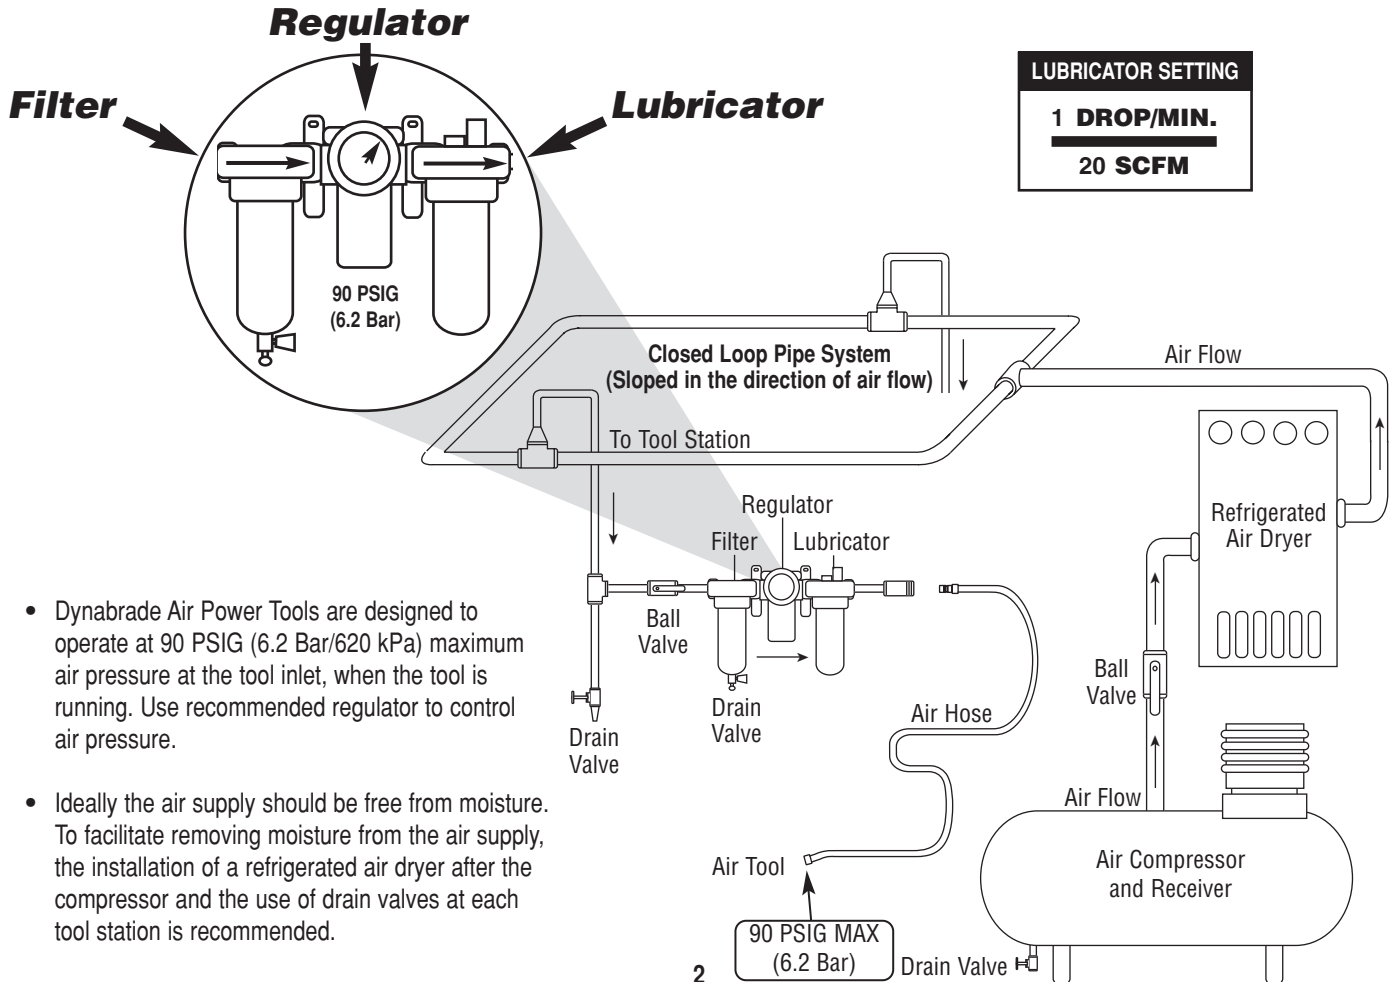

Maintenance Instructions

Important: A preventative maintenance program is recommended whenever portable power tools are used. The program should include inspection of air supply lines, air line pressure, proper lubrication and repair of tools. Refer to ANSI B186.1 for additional maintenance information.

- Use only genuine Dynabrade replacement parts to insure quality. To order replacement parts, specify **Model#**, **Serial#** and **RPM** of your air tool.
- It is strongly recommended that all Dynabrade rotary vane air tools be used with a Filter-Regulator-Lubricator to minimize the possibility of misuse due to unclean air, wet air or insufficient lubrication. Dynabrade recommends the following: **11405** Air Filter-Regulator-Lubricator (FRL) – Provides accurate air pressure regulation and two stage filtration of water contaminants. Operates 40 SCFM @ 100 PSIG with 3/8" NPT female ports.
- **Apply 3 plunges of 95542 Grease through grease fitting located on side of angle head with 95541 Grease Gun after every 100 Hours of use.**
- Dynabrade recommends one drop of air lube per minute for each 20 SCFM (example: if the tool specification states 40 SCFM, set the drip rate on the filter-lubricator to 2 drops per minute). Dynabrade Air Lube (P/N **95842**: 1 pt 473 ml) is recommended.

Routine Preventative Maintenance:

- Check the free speed of 11" Random Orbital Sander by using a tachometer on regular basis.
- Mineral spirits are recommended when cleaning the tool and parts. Do not clean tool or parts with any solvents or oils containing acids, esters, ketones, chlorinated hydrocarbons or nitro carbons.
- DO NOT clean or maintain tools with chemicals that have a low flash point (example: WD-40®).
- A Motor Tune-Up Kit (P/N **98224**) is available which includes high wear and medium wear motor parts.
- Air tool labels must be kept legible at all times, if not, reorder label(s) and replace. User is responsible for maintaining specification information i.e.: Model #, S/N, and RPM. (See Assembly Breakdown)
- Blow air supply hose out prior to initial use.
- Visually inspect air hoses and fittings for frays, visible damage and signs of deterioration. Replace damaged or worn components.
- Refer to Dynabrade's Warning/Safety Operating Instructions Tag (Reorder No. **95903**) for safety information.

After maintenance is performed on tool, add a few drops of Dynabrade Air Lube (P/N **95842**) to the air line and start the tool a few times to lubricate air motor. Check for excessive tool vibration.

Handling and Storage:

- Use of tool rests, hangers and/or balancers is recommended.
- Protect tool inlet from debris (see Notice below).
- DO NOT carry tool by air hose, or near the tool throttle lever.
- Protect abrasive accessories from exposure to water, solvents, high humidity, freezing temperature and extreme temperature changes.
- Store accessories in protective racks or compartments to prevent damage.

Machine Specifications

| Model Number | Motor hp (W) | Motor RPM | Pad Dia. Inch (mm) | Sound Level | Maximum Air Flow CFM/SCFM (LPM) | Hose I.D. Size | Air Inlet Thread | Weight Pound (kg) | Length Inch (mm) | Height Inch (mm) |
|--------------|--------------|-----------|--------------------|-------------|---------------------------------|----------------|------------------|-------------------|------------------|------------------|
| 58480 | .7 (522) | 2,500 | 11 (279) | 87 dB(A) | 3/27 (765) | 3/8" (10mm) | 1/4" NPT | 8.3 (3.7) | 17 (432) | 6 (152) |
| 58485 | .7 (522) | 2,500 | 11 (279) | 87 dB(A) | 3/27 (765) | 3/8" (10mm) | 1/4" NPT | 9.1 (4.1) | 17 (432) | 6 (152) |

Additional Specifications: Air Pressure 90 PSIG (6.2 Bar)

Notice

All Dynabrade motors use the highest quality parts and materials available and are machined to exacting tolerances. The failure of quality pneumatic motors can most often be traced to an unclean air supply or the lack of lubrication. Air pressure easily forces dirt or water contained in the air supply into motor bearings causing early failure. It often scores the cylinder walls and the rotor blades resulting in limited efficiency and power. Our warranty obligation is contingent upon proper use of our tools and cannot apply to equipment which has been subjected to misuse such as unclean air, wet air or a lack of lubrication during the use of this tool.


One Year Warranty

Following the reasonable assumption that any inherent defect which might prevail in a product will become apparent to the user within one year from the date of purchase, all equipment of our manufacture is warranted against defects in workmanship and materials under normal use and service. We shall repair or replace at our factory, any equipment or part thereof which shall, within one year after delivery to the original purchaser, indicate upon our examination to have been defective. Our obligation is contingent upon proper use of Dynabrade tools in accordance with factory recommendations, instructions and safety practices. It shall not apply to equipment which has been subject to misuse, negligence, accident or tampering in any way so as to affect its normal performance. Normally wearable parts such as bearings, contact wheels, rotor blades, etc., are not covered under this warranty.

11" Random Orbital Sander Complete Assembly

Index Key

| No. | Part # | Description |
|-----|--------|-------------------------------------------|
| 1 | 95178 | Screw (5) |
| 2 | 95886 | Washer (5) |
| 3 | 56231 | Pad (Optional Pads Pg.8) |
| 4 | 61355 | Bearing Shaft |
| 5 | 61353 | Mount Plate |
| 6 | 54520 | Bearing (2) |
| 7 | 96118 | Screw (3) |
| 8 | 94914 | Spacer |
| 9 | 96557 | Screw (2) |
| 10 | 61352 | Counterweight |
| 11 | 61354 | Spacer (2) |
| 12 | 61351 | Adapter |
| 13 | 95344 | Screw (3) |
| 14 | 61356 | Guard Assembly |
| 15 | 61360 | Vacuum Shroud Assy. (Model 58485 Only) |
| 16 | 18564 | Spindle |
| 17 | 18563 | Key |
| 18 | 18562 | Retaining Ring |
| 19 | 18561 | Bearing |
| 20 | 18560 | Screw (4) |
| 21 | 18559 | Washer (4) |
| 22 | 18902 | Spindle Cap |
| 23 | 18593 | Bevel Gear |
| 24 | 18557 | Wave Washer |
| 25 | 18556 | Retaining Ring |
| 26 | 18555 | Bearing (3) |
| 27 | 18554 | Spacer |
| 28 | 18552 | Housing |
| 29 | 18553 | Handle |
| 30 | 18551 | Plug |
| 31 | 18594 | Pinion Gear |
| 32 | 18568 | Bearing |
| 33 | 18569 | Front Bearing Plate |
| 34 | 18570 | Blade (4/pkg.) |
| 35 | 18595 | Rotor |
| 36 | 18571 | Cylinder |
| 37 | 18572 | Pin |
| 38 | 18573 | Rear Bearing Plate |
| 39 | 18567 | Retaining Ring |
| 40 | 18574 | O-Ring |
| 41 | 18576 | Gasket |
| 42 | 18577 | Spacer |
| 43 | 18578 | Gasket |
| 44 | 18579 | Valve Housing |
| 45 | 18559 | Washer (4) |
| 46 | 18580 | Screw (4) |
| 47 | 61363 | Grip |
| 48 | 18581 | Valve Stem |
| 49 | 18582 | Safety Throttle Lever |
| 50 | 18583 | Pin |
| 51 | 18584 | Valve Seat |
| 52 | 18585 | Valve Pin |
| 53 | 18586 | Valve |
| 54 | 18587 | Valve Spring |
| 55 | 18588 | Gasket |
| 56 | 18589 | Exhaust Retainer |
| 57 | 18592 | Exhaust Bushing |
| 58 | 18590 | O-Ring |
| 59 | 18591 | Inlet Bushing |
| 60 | 18604 | Label - Mdl 58480 |
| | 18605 | Label - Mdl 58485 |

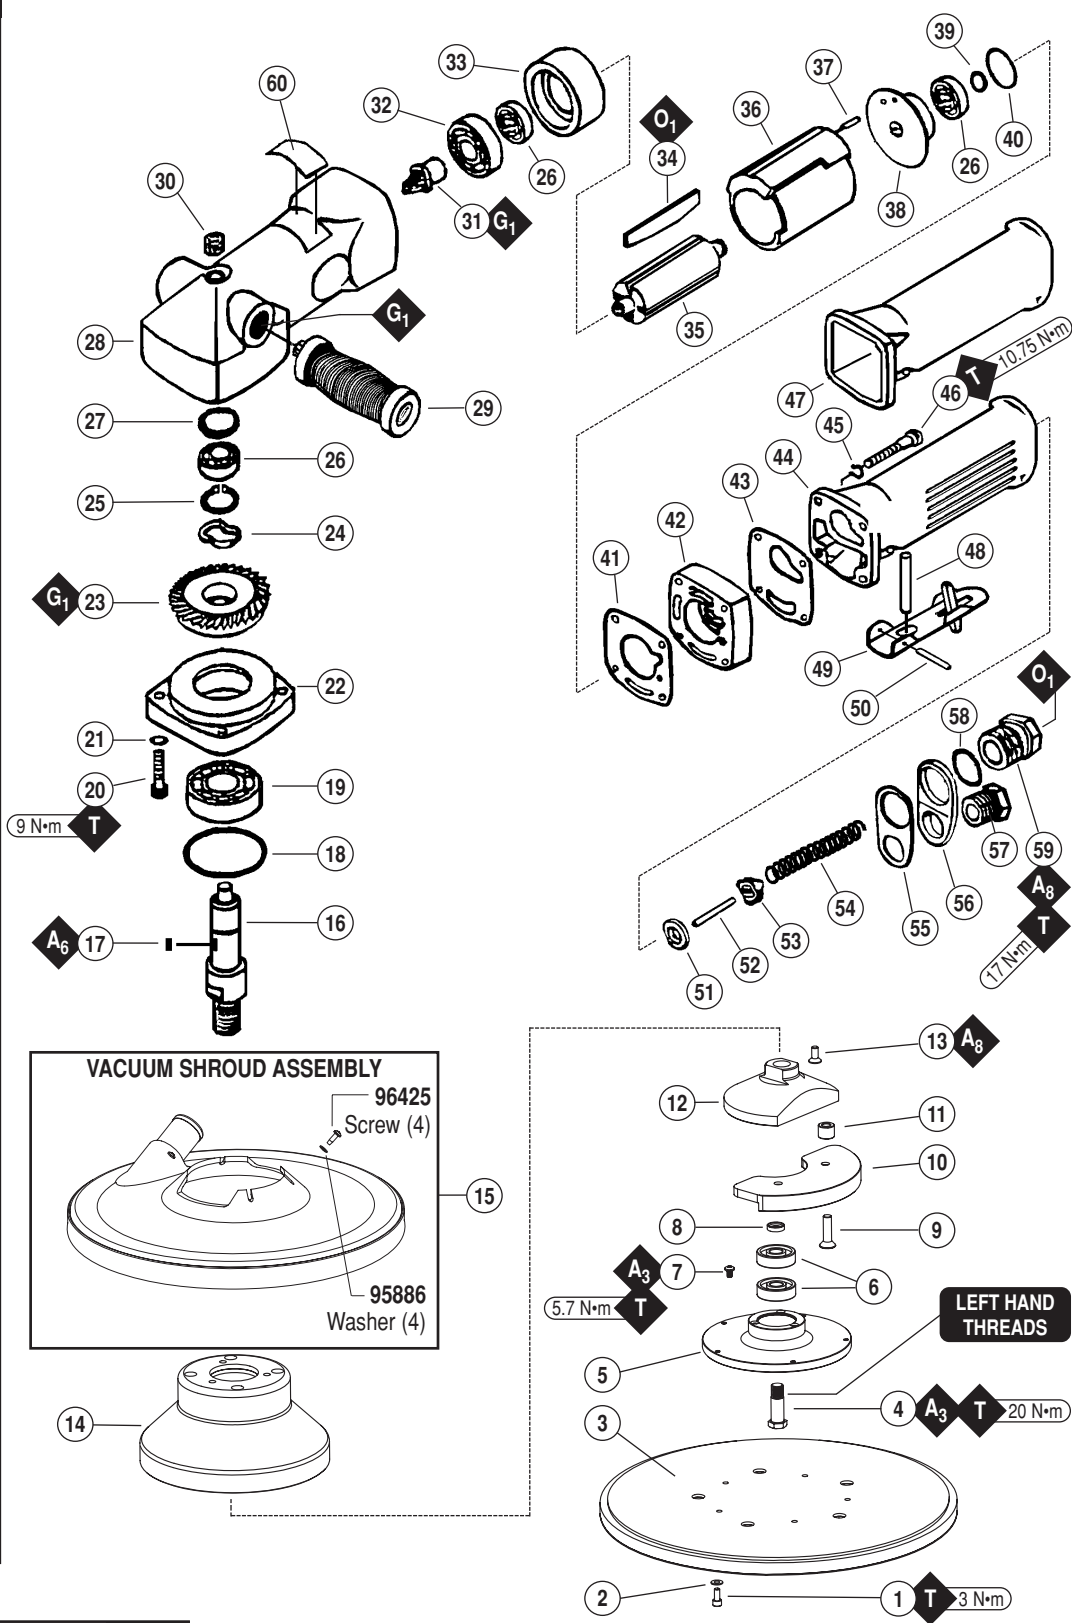

KEY

- O** Oil: O_1 = Air Lube
- G** Grease:
 G_1 = Lubriplate 630 AA
- A** Adhesive: A_3 = Loctite #242 A_8 = Loctite #567
 A_6 = Loctite #380
- T** Torque: $N \cdot m \times 8.85 = In. - lbs.$

Assembly/Disassembly Instructions

Important: The manufactures warranty is void if the tool is disassembled before the warranty expires. An air motor Tune-Up Kit, Part Number 98224 is also available. It contains the high and medium wear components that most commonly need replacement.

Orbital Head Disassembly:

1. Shut the air supply and disconnect the sander from the air supply hose.
2. Use the **95134** (9/64") Hex Key to remove the **95178** Screws (5), **95886** Washers (5) and the backing pad.
Note: This step for vacuum model only. Remove the **96425** screws (4), **95886** Washers (4) and the **61360** vacuum Shroud Assembly.
3. Hold the **18552** Housing in a vise with bronze or aluminum jaws so that the orbital head assembly is facing up.
4. Insert the **95281** (19mm) Wrench through the access opening in the **61356** Guard Assembly to hold the **18564** Spindle stationary.
5. Use the **42745** Pin Wrench to turn the orbital head assembly counterclockwise and remove it from the spindle.
6. Use the **95266** (3mm) Hex Key to remove the **95344** Screws (3) by turning them counterclockwise. Remove the **61356** Guard Assembly.
7. Remove the tool from the vise and secure the wrench flats of the **61351** Adapter in the vise. Use a 1/2" socket to remove the **61355** Bearing Shaft by turning it clockwise. (**LEFT HAND THREADS**)
8. Use a T-20 TORX® bit to remove the **96118** Screws from the **61353** Mount Plate.
9. Use the **96242** Bearing Press Tool and the **96232** Arbor Press to remove the **54520** Bearings (2) from the **61353** Mount Plate.

Orbital Head Disassembly Complete.

Motor Disassembly:

1. Shut the air supply and disconnect the sander from the air supply hose.
2. Hold the **18552** Housing in a vise with bronze or aluminum jaws so that the **18579** Valve Housing is pointing up.
3. Pull the **61363** Grip off the **18579** Valve Housing. **Note:** A "Hot Air Gun" can be used to warm the **61363** Grip, making it more flexible.
4. Use the **95331** (4mm) Hex Key to remove the **18580** Screws (4), **18559** Washers (4), **18579** Housing, **18578** Gasket, **18577** Spacer, **18574** O-Ring and **18576** Gasket.
5. Carefully slide the air motor out of the **18579** Valve Housing. **Note:** A "Hot Air Gun" can be used to warm and expand the **18579** Valve Housing.
6. Use the **96343** Retaining Ring Pliers to remove the **18567** Retaining Ring.
7. Fasten the **96346**, (2") Bearing Separator carefully between the **18573** Rear Bearing Plate and the **18571** Cylinder and place the separator on the table of the **96232**, (#2) Arbor Press so that the **18594** Pinion Gear is pointing down.
8. Use a 3/16" dia. flat end drive punch as a press tool to push the **18595** Rotor out of the **18555** Bearing.
9. Use the **96213** Bearing Removal Tool and the arbor press to push the **18555** Bearing out of the **18573** Rear Bearing Plate.
10. Fasten the bearing separator around the flange of the **18594** Pinion Gear so that the flat side of the separator is against the **18568** Bearing. With a downward motion strike the flat side of the separator against the table of the arbor press several times. The **18568** Bearing will slide out of the **18569** Front Bearing Plate.
11. Use a 3/16" dia. flat end drive punch as a press tool and the arbor press to push the **18594** Pinion Gear out of the **18568** Bearing.
12. Use a 3/16" dia. flat end drive punch as a press tool and the arbor press to push the **18595** Rotor out of the front **18555** Bearing. Use the **96213** Bearing Removal Tool and the arbor press to push the **18555** Bearing out of the **18569** Front Bearing Plate.

Motor Disassembly Complete.

Right-Angle Gear Disassembly:

1. Use the **95331** (4mm) Hex Key to remove the **18560** Screws (4), and **18559** Washers (4).
2. Fasten the **96346** Bearing Separator under the **18555** Bearing and use a 3/16" dia. flat end drive punch and the **96232** (#2) Arbor Press to push the bearing from the **18564** Spindle.
3. Use the **96343** Retaining Ring Pliers to remove the **18556** Retaining Ring, **18557** Wave Washer, **18593** Bevel Gear, and **18563** Key.
4. Use the **96343** Retaining Ring Pliers to remove the **18562** Retaining Ring, and pull the spindle along with the **18561** Bearing out of the **18902** Spindle Cap.
5. Place the **18561** Bearing on the tool plate of the arbor press and push the **18564** Spindle out of the bearing.

Right-Angle Gear Disassembly Complete.

Motor Assembly:

1. Use the raised outer portion of the **96240** Bearing Press Tool to install the **18555** Bearing into the **18569** Front Bearing Plate.
Note: Use the **96232** (#2) Arbor Press.
2. Position the **18595** Rotor on the **96231** Tool Plate of the **96232** (#2) Arbor Press so that the rear portion of the rotor body is flat on the tool plate and the spline end is pointing up. Use the **18571** Cylinder as a jig. Place the cylinder over the rotor so that it is also setting on the tool plate. Slip the front bearing/plate assembly over the spline end of the rotor and use the raised center portion of the **96240** Bearing Press Tool to install the front bearing/plate assembly onto the **18595** Rotor. **Note:** Use approximately 3 lbs. (1364 g.) of force. Remove the rotor with the bearing/plate assembly from the arbor press. Use a .001" (.03mm) thick feeler gage to check the fit of the bearing plate to the face of the rotor. The clearance between the bearing plate and the face of the rotor should be .001" to .0015" (.03 - .04mm).
3. Place the **18568** Bearing flat on the tool plate of the arbor press and install the **18594** Pinion Gear into the inner race of the bearing.
4. Place the **18569** Front Bearing Plate flat on the tool plate of the arbor press so that the rotor is hanging down. Set the **18568** Bearing on the opening of the **18569** Front Bearing Plate so that the pinion gear is pointing up. Place one end of the **18571** Cylinder against the outer race of the **18568** Bearing and using the cylinder as a press tool, push the **18568** Bearing into the front bearing plate.
5. Apply a small amount of the **95842** Dynabrade Air Lube (10W/NR or equivalent) to the **18570** Blades (4) and install them into the **18595** Rotor.
6. Place the **18573** Rear Bearing Plate flat on the tool plate of the arbor press and use the raised outer portion of the **96240** Bearing Press Tool to install the **18555** Bearing into the rear bearing plate.
7. Position the end of the **18594** Pinion Gear on the tool plate of the arbor press and place the rear bearing/plate assembly on the rear bearing journal of the rotor. **Note:** Make sure that the cylinder line-up pin **18572** aligns with the hole in the rear bearing plate.

Assembly/Disassembly Instructions - (Continued)

8. Use the raised inner portion of the **96240** Bearing Press Tool and the arbor press to push the **18555** Bearing along with the rear bearing plate down onto the rotor until the bearing plate touches the cylinder. This should create a snug fit between the bearing plates and the cylinder. If the fit is too loose, add a slight bit more press (preload). **Note:** A "snug" fit allows the cylinder to be shifted back and forth with a small amount of finger pressure. However, the fit is not loose or sloppy.
9. Use the **96343** Retaining Ring Pliers to install the **18567** Retaining Ring onto the rotor.
10. Secure the **18552** Housing in a vise with bronze or aluminum jaws so that the motor opening is pointing up.
11. With the bearing plates and the cylinder aligned, apply a film of oil to the outside diameter of the motor. Orient the motor according to the exhaust passage in the **18552** housing and the **18579** Valve Housing. Carefully slide the motor into the **18552** Housing. **Note:** It may be necessary to warm the housing with a "Hot Air Gun". This will expand the housing and facilitate the installation of the motor.
12. Install the **18576** Gasket, **18577** Spacer and **18578** Gasket. These must align with the **18572** Pin, air inlet and exhaust openings.
13. Orient and install the **18579** Valve Housing so that the air inlet and exhaust openings align correctly.
14. Use the **95331** (4mm) Hex Key to secure the valve housing to the **18552** Housing with the **18559** Washers (4) and the **18580** Screws (4). (Torque to 10.75 N·m/95 in. lbs.)
15. Install the **61363** Grip onto the **18579** Valve Housing. **Note:** A "Hot Air Gun" can be used to warm the **61363** Grip, making it more flexible.
16. Install an air fitting into the **18591** Inlet Bushing and connect to the air supply. Test the air motor for proper operation.

Motor Assembly Complete.

Right-Angle Gear Assembly:

1. Wipe off the surface of the **96231** Tool Plate to make sure that it is clean. Place the open side of the **18561** Bearing on the tool plate so that the inner race is supported. Position the **18564** Spindle into the bearing so that the threaded end is pointing up. Press the spindle and the bearing together.
2. Place the **18902** Spindle Cap on the tool plate so that the open side of the bearing pocket is facing up.
3. Position the spindle with the bearing on the spindle cap so that the threaded end of the spindle is pointing up. Press the spindle with bearing all the way into the spindle cap.
4. Use the **96343** Retaining Ring Pliers to install the **18562** Retaining Ring.
5. Clean the keyway of the spindle with a swab moistened with acetone. Also, clean the **18563** Key with acetone and apply a small amount of Loctite® #380 (or equivalent) to the keyway. Install the key and let the adhesive set.
6. Install and press the **18593** Bevel Gear onto the **18564** Spindle. Apply a small amount of the **95542** Grease to the bevel gear and pinion.
7. Install the **18557** Wave Washer and use the retaining ring pliers to install the **18556** Retaining Ring.
8. Place the threaded portion of the **18564** Spindle on the tool plate of the arbor press and use the raised center portion of the **96240** Bearing Press Tool to press the **18555** Bearing onto the spindle.
9. Install the **18554** Spacer into the **18552** Housing so that the raised outer portion of the spacer will be against the outer race of the **18555** Bearing.
10. Orient the air bleed notch of the spindle cap toward the throttle lever and install the spindle assembly into the housing. Check the fit of the gears for smooth rotation.
11. Use the **95331** (4mm) Hex Key to install the **18560** Screws (4), and **18559** Washers (4). (Torque to 9 N·m/80 in. lbs.)
12. Apply 3 plunges of the **95542** Grease through the grease fitting with the **95541** Grease Gun initially, and after every 100 hours of use.

Right-Angle Gear Assembly Complete.

Right-Angle Gear Lubrication Instructions:

Apply 3 plunges of the 95542 Grease through the grease fitting with the 95541 Grease Gun after every 100 hours of use.

Orbital Head Assembly:

1. Use one of the old **54520** Bearings as a press tool and the **96232** Arbor Press (#2) to install the two new bearings into the **61353** Mount Plate.
2. Apply a small amount of the Loctite® #243 (or equivalent) to the threads of the **96118** Screws (3) and use a T-20 TORX® bit to install the **96118** Screws into the **61353** Mount Plate. (Torque to 5.7 N·m/50 in. lbs.)
3. Hold the wrench flats of the **61351** Adapter in the vise with bronze or aluminum jaws so that the counterweight is facing up. Insert the **61355** Bearing Shaft through the two **54520** Bearings. Place the **94914** Spacer onto the bearing shaft. Apply a small amount of the Loctite® #243 (or equivalent) to the threads of the bearing shaft. Use a 1/2" socket to install the bearing shaft by turning it counterclockwise. (**LEFT HAND THREADS**) (Torque to 20 N·m/180 in. lbs.)
4. Remove the **61351** Adapter from the vise and secure the **18579** Housing in a vise with bronze or aluminum jaws so that the **18564** Spindle is pointing up.
5. Use the **95266** (3mm) Hex Key to install the Guard Assembly. Apply a small amount of the Loctite® #567 (or equivalent) to the threads of the **95344** Screws (3). Fasten the guard assembly to the spindle cap with the screws.
Note: This step for vacuum model only. Install the **96425** Screws (4), **95886** Washers (4) and the **61360** Vacuum Shroud Assembly.
6. Insert the **95281** (19mm) Wrench through the access opening in the **61356** Guard Assembly to hold the **18564** Spindle stationary.
7. Use the **42745** Pin Wrench to install the orbital head assembly onto the spindle.
8. Install the backing pad and use the **95134** (9/64") Hex Key to secure it with the **95178** Screws (5), and **95886** Washers (5).
9. Connect the sander to the air supply hose and check the sander for proper operation.

Orbital Head Assembly Complete.

Sander Assembly Complete. Please allow 30 minutes for adhesives to cure before operating tool.

Important: Motor should now be tested for proper operation at 90 PSIG. If motor does not operate properly or operates at a higher RPM than marked on the tool, the tool should be serviced to correct the cause before use. Before operating, place 2-3 drops of Dynabrade Air Lube (P/N **95842**) directly into air inlet with throttle lever depressed. Operate tool for 30 seconds to determine if tool is operating properly and to allow lubricating oils to properly permeate motor.

Loctite® is a registered trademark of Loctite Corp.

Preventative Maintenance Schedule

For All 11" Random Orbital Sander

This service chart is published as a guide to expectant life of component parts. The replacement levels are based on average tool usage over one year. Dynabrade Inc. considers one year usage to be 1,000 hours or 50% of a man year.

Parts Common to all Models:

| LEGEND | |
|----------|------------------------------------------------|
| T | Included in Tune-Up Kit |
| X | Type of wear, no other comments apply. |
| L | Easily lost. Care during assembly/disassembly. |
| D | Easily damaged during assembly/disassembly. |
| R | Replace each time tool is disassembled. |



98224 – Motor Tune-Up Kit

| Index # | Part Number | Description | Number Required | High Wear 100% | Medium Wear 70% | Low Wear 30% | Non-Wear 10% |
|---------|-------------|-----------------------|-----------------|----------------|-----------------|--------------|--------------|
| 1 | 95178 | Screw | 5 | | | L | |
| 2 | 95886 | Washer | See Note | | | L | |
| 3 | 56231 | Pad | 1 | | | X | |
| 4 | 61355 | Bearing Shaft | 1 | | | X | |
| 5 | 61353 | Mount Plate | 1 | | | X | |
| 6 | 54520 | Bearing | 2 | | T | | |
| 7 | 96118 | Screw | 3 | | | L | |
| 8 | 94914 | Spacer | 1 | | | L | |
| 9 | 96557 | Screw | 2 | | | L | |
| 10 | 61352 | Counterweight | 1 | | | X | |
| 11 | 61354 | Spacer | 2 | | | X | |
| 12 | 61351 | Adapter | 1 | | | X | |
| 13 | 95344 | Screw | 3 | | | L | |
| 14 | 61356 | Guard Assembly | 1 | | | X | |
| 15 | 61360 | Vacuum Shroud Assy. | 1 | | | X | |
| | 96425 | Screw | 4 | | | L | |
| 16 | 18564 | Spindle | 1 | | | X | |
| 17 | 18563 | Key | 1 | | | L | |
| 18 | 18562 | Retaining Ring | 1 | | T | | |
| 19 | 18561 | Bearing | 1 | | T | | |
| 20 | 18560 | Screw | 4 | | | L | |
| 21 | 18559 | Washer | 4 | | | L | |
| 22 | 18902 | Spindle Cap | 1 | | | X | |
| 23 | 18593 | Bevel Gear | 1 | | | X | |
| 24 | 18557 | Wave Washer | 1 | | | L | |
| 25 | 18556 | Retaining Ring | 1 | | | D | |
| 26 | 18555 | Bearing | 3 | | T | | |
| 27 | 18554 | Spacer | 1 | | | X | |
| 28 | 18552 | Housing | 1 | | | X | |
| 29 | 18553 | Handle | 1 | | | X | |
| 30 | 18551 | Plug | 1 | | | X | |
| 31 | 18594 | Pinion Gear | 1 | | | X | |
| 32 | 18568 | Bearing | 1 | | T | | |
| 33 | 18569 | Front Bearing Plate | 1 | | | X | |
| 34 | 18570 | Blade (4/pkg.) | 4 | T | | | |
| 35 | 18595 | Rotor | 1 | | | X | |
| 36 | 18571 | Cylinder | 1 | | | X | |
| 37 | 18572 | Pin | 1 | | | X | |
| 38 | 18573 | Rear Bearing Plate | 1 | | | X | |
| 39 | 18567 | Retaining Ring | 1 | | | D | |
| 40 | 18574 | O-Ring | 1 | | T | | |
| 41 | 18576 | Gasket | 1 | | T | | |
| 42 | 18577 | Spacer | 1 | | | X | |
| 43 | 18578 | Gasket | 1 | | T | | |
| 44 | 18579 | Valve Housing | 1 | | | X | |
| 45 | 18559 | Washer | 4 | | | L | |
| 46 | 18580 | Screw | 4 | | | X | |
| 47 | 61363 | Grip | 1 | | | X | |
| 48 | 18581 | Valve Stem | 1 | | | X | |
| 49 | 18582 | Safety Throttle Lever | 1 | | | L | |
| 50 | 18583 | Pin | 1 | | | L | |
| 51 | 18584 | Valve Seat | 1 | | | X | |
| 52 | 18585 | Valve Pin | 1 | | | X | |
| 53 | 18586 | Valve | 1 | | | X | |
| 54 | 18587 | Valve Spring | 1 | | | X | |
| 55 | 18588 | Gasket | 1 | | | X | |
| 56 | 18589 | Exhaust Retainer | 1 | | | | X |
| 57 | 18592 | Exhaust Bushing | 1 | | | | X |
| 58 | 18590 | O-Ring | 1 | | | | X |
| 59 | 18591 | Inlet Bushing | 1 | | | | X |
| 60 | See Note | Label | 1 | | | X | |


Note: Please refer to page 4 of tool manual for specific part number or number required.

Optional Accessories



98224 Motor Tune-Up Kit

- Includes assorted parts to help maintain and repair motor.

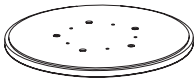

Optional 11" Pads:

- 56230 Vinyl
- 56232 Loop-Face
- 56220 HookIt™ II Interface Pad
- 56231 Hook-Face
- 53997 Hook-Face, Vac (15 Hole)
- 53998 Interface Pad (Hook-Face)



Dynabrade Air Lube

- Formulated for pneumatic equipment.
- Absorbs up to 10% of its weight in water.
- Prevents rust and formation of sludge.
- Keeps pneumatic tools operating longer with greater power and less down time.

95842: 1 pt. (473 ml)

95843: 1 gal. (3.8 L)



95542 Grease 10 oz.

- Multi-purpose grease for all types of bearings, cams, gears.
- High film strength; excellent resistance to water, steam, etc.
- Workable range 0° F to 300° F.

95541 Push-type Grease Gun

- One-hand operation.

Special Repair Tools

Note: Not Shown, Mentioned In Assembly/Disassembly Instructions

- 96242 Bearing Press Tool
- 96232 (#2) Arbor Press
- 96346 (2") Bearing Separator
- 96213 Bearing Removal Tool
- 96240 Bearing Press Tool
- 96231 Tool Plate
- 42745 Fixed-Face Pin Wrench

Reference Contact Information

- American National Safety Institute – ANSI**
25 West 43rd Street
Forth Floor
New York, NY 10036
Tel: 1 (212) 642-4900
Fax: 1 (212) 398-0023
- Government Printing Office – GPO**
Superintendent of Documents
Attn. New Orders
P.O. Box 371954
Pittsburgh, PA 15250-7954
Tel: 1 (202) 512-1803
- European Committee for Standardization**
Rue de Stassart 36
B - 1050 Brussels, Belgium



Visit Our Web Site: www.dynabrade.com

Email: Customer.Service@Dynabrade.com

DYNABRADE, INC., 8989 Sheridan Drive • Clarence, NY 14031-1490 • Phone: (716) 631-0100 • Fax: 716-631-2073 • International Fax: 716-631-2524
DYNABRADE EUROPE S.à.r.l., Zone Artisanale • L-5485 Wormeldange—Haut, Luxembourg • Telephone: 352 76 84 94 1 • Fax: 352 76 84 95 1

©DYNABRADE, INC., 2007

PRINTED IN USA