

# Sander/Polisher

## Air Motor and Machine Parts

### Models:


**51470 - 2,000 RPM, Dry**  
**51472 - 3,100 RPM, Dry**

## ! WARNING

Always operate, inspect and maintain this tool in accordance with the Safety Code for portable air tools (ANSI B186.1) and any other applicable safety codes and regulations. Please refer to Dynabrade's Warning/Safety Operating Instructions for more complete safety information.

### Index Key

| No. | Part # | Description  |
|-----|--------|--|
| 1   |        | Optional Pads on pg. 4                               |
| 2   | 50963  | Retainer   |
| 3   | 50899  | Shaft Seal   |
| 4   | 50982  | Spindle Assembly                                     |
| 5   | 50887  | Bearing  |
| 6   | 50997  | Bevel Gear - 2,000 RPM                               |
|     | 50996  | Bevel Gear - 3,100 RPM                               |
| 7   | 96306  | Shim (as req.)                                       |
| 8   | 96307  | Shim (as req.)                                       |
| 9   | 02048  | Wick   |
| 10  | 96325  | Shell Bearing  |
| 11  | 53163  | Handle Assembly                                      |
| 12  | 50980  | Head Assembly<br>(Incl. 01041 Lube Fitting)          |
| 13  | 01041  | Gear Lubrication Fitting (2)                         |
| 14  | 95939  | Retaining Ring                                       |
| 15  | 52158  | Bevel-Pinion - 2,000 RPM                             |
|     | 52124  | Bevel-Pinion - 3,100 RPM                             |
| 16  | 01266  | Bearing (2)  |
| 17  | 50435  | Key  |
| 18  | 50985  | Pinion Shaft   |
| 19  | 07154  | Shim (as req.)                                       |
| 20  | 07155  | Shim (as req.)                                       |
| 21  | 50986  | Spacer   |
| 22  | 53551  | Coupling Nut   |
| 23  | 50951  | Coupler  |
| 24  | 50956  | Adapter  |
| 25  | 50987  | Lock Ring  |
| 26  | 50970  | Gear Casing Assembly<br>(Incl. 01041 Grease Fitting) |
| 27  | 04014  | Screw  |
| 28  | 02552  | Bearing (2)  |
| 29  | 53191  | Ring Gear  |
| 30  | 53180  | Planetary Carrier                                    |
| 31  | 53193  | Gear (2)   |
| 32  | 53182  | Gear Shaft (2)                                       |
| 33  | 04026  | Bearing (4)  |
| 34  | 01007  | Bearing  |
| 35  | 01121  | Shim Pack (as req.)                                  |
| 36  | 53183  | Front Bearing Plate                                  |
| 37  | 01010  | Spacer   |
| 38  | 04017  | Rotor  |
| 39  | 01185  | Blades (4/pkg.)                                      |
| 40  | 01028  | Cylinder   |
| 41  | 50767  | Pin  |
| 42  | 01721  | Rear Bearing Plate                                   |
| 43  | 02649  | Bearing  |
| 44  | 53175  | Collar   |
| 45  | 51485  | Housing - 51470                                      |
|     | 51487  | Housing - 51472                                      |
| 46  | 01477  | Valve Stem   |
| 47  | 01089  | Throttle Lever                                       |
| 48  | 01017  | Spring Pin   |
| 49  | 95558  | Retaining Ring                                       |
| 50  | 95730  | O-Ring   |
| 51  | 01247  | Speed Regulator                                      |
| 52  | 01024  | O-Ring   |
| 53  | 01464  | Seal   |
| 54  | 01472  | Tip Valve  |
| 55  | 01468  | Spring   |
| 56  | 01564  | Air Control Ring                                     |
| 57  | 95438  | O-Ring   |
| 58  | 95711  | Retaining Ring                                       |
| 59  | 94521  | Muffler Base   |
| 60  | 94528  | Muffler  |
| 61  | 94522  | Muffler Cap  |
| 62  | 95375  | O-Ring   |
| 63  | 94526  | Spacer   |
| 64  | 94523  | Inlet Adapter  |
| 65  | 94519  | Muffler Assembly                                     |

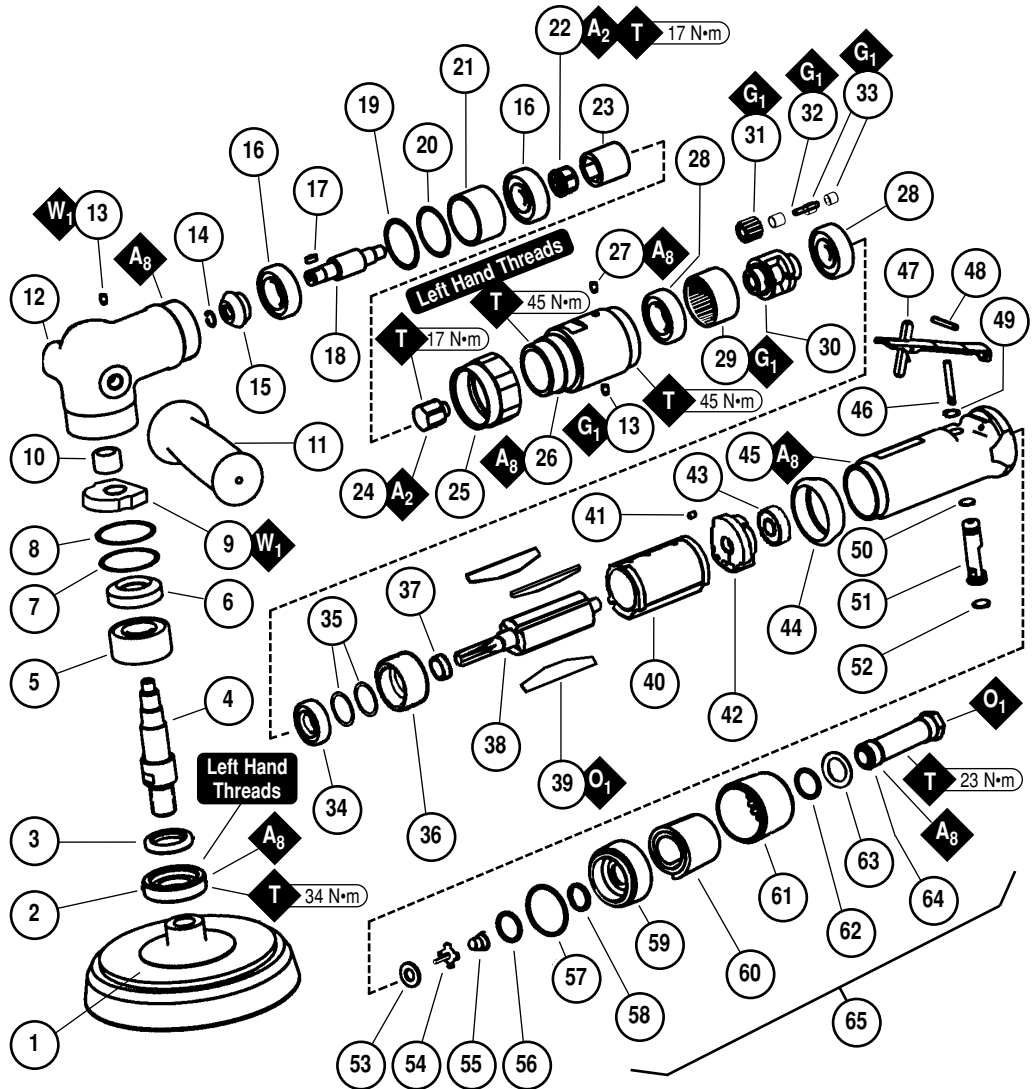

95281 - 19 mm Wrench

| KEY      |  |
|----------|--|
| <b>O</b> | Oil: O <sub>1</sub> = Air Lube   |
| <b>W</b> | Wicking: W <sub>1</sub> = Wicking Gear Oil                               |
| <b>G</b> | Grease: G <sub>1</sub> = Lubriplate 630AA                                |
| <b>A</b> | Adhesive: A <sub>2</sub> = Loctite #271<br>A <sub>8</sub> = Loctite #567 |
| <b>T</b> | Torque: N•m x 8.85 = In. - lbs.  |

# Important Operating, Maintenance and Safety Instructions

Carefully read all instructions before operating or servicing any Dynabrade® Abrasive Power Tool.

**Warning:** Hand, wrist and arm injury may result from repetitive work motion and overexposure to vibration.

**Important:** All Dynabrade Rotary Vane air tools must be used with a Filter-Regulator-Lubricator to maintain all warranties.

## Operating Instructions:

**Warning:** Eye, face, respiratory, sound and body protection must be worn while operating power tools. Failure to do so may result in serious injury or death. Follow safety procedures posted in workplace.

1. With power source disconnected from tool, securely fasten abrasive/accessory on tool.
2. Install air fitting into inlet bushing of tool. **Important:** Secure inlet bushing of tool with a wrench before attempting to install the air fitting to avoid damaging valve body housing.
3. Connect power source to tool. Be careful not to depress throttle lever in the process.
4. Check tool speed with tachometer. If tool is operating at a higher speed than the RPM marked on the tool or operating improperly, the tool should be serviced to correct the cause before use.

## Maintenance Instructions:

1. Check tool speed regularly with a tachometer. If tool is operating at a higher speed than the RPM marked on the tool, the tool should be serviced to correct the cause before use.
2. Some silencers on air tools may clog with use. Clean and replace as required.
3. All Dynabrade Rotary Vane air motors should be lubricated. Dynabrade recommends one drop of air lube per minute for each 10 SCFM (example: if the tool specifications state 40 SCFM, set the drip rate of your filter-lubricator at 4 drops per minute). Dynabrade Air Lube (P/N **95842**: 1 pt. 473 ml) is recommended.
4. An Air Line Filter-Regulator-Lubricator must be used with this air tool to maintain all warranties. Dynabrade recommends the following: **11411** Air Line Filter-Regulator-Lubricator — Provides accurate air pressure regulation, two-stage filtration of water contaminants and micro-mist lubrication of pneumatic components. Operates up to 55 SCFM @ 100 PSIG has 1/2" NPT female ports.
5. Lubricate Planetary Gears through the gear casing grease fitting with 2-3 plunges for every 50 hours of use, to achieve maximum gear life (order **95542** Grease and **95541** Gun).
6. Lubricate Wick System through the angle gear head gear oil fitting with 2-3 plunges for every 8 hours of use, to achieve maximum gear life. **Important:** Use only the recommended angle gear oil for the wick system. Do not contaminate the wick with any other oil or grease product (order **95848** Gear Oil and **95541** Gun).
7. Use only genuine Dynabrade replacement parts. To reorder replacement parts, specify the **Model #**, **Serial #** and **RPM** of your machine.
8. A Motor Tune-Up Kit (P/N **96178**) is available which includes assorted parts to help maintain motor in peak operating condition. Please refer to Dynabrade's Preventative Maintenance Schedule for a guide to expectant life of component parts.
9. A Lubrication Accessory Kit (P/N **50790**) is available which contains Dynabrade's **95542** Grease, **95541** Lubrication Gun (2) and **95848** Gear Oil.
10. Mineral spirits are recommended when cleaning the tool and parts. Do not clean tool or parts with any solvents or oils containing acids, esters ketones, chlorinated hydrocarbons or nitro carbons.

## Safety Instructions:

Products offered by Dynabrade should not be converted or otherwise altered from original design without expressed written consent from Dynabrade, Inc.



- **Important:** User of tool is responsible for following accepted safety codes such as those published by the American National Standards Institute (ANSI).
- Operate machine for one minute before application to workpiece to determine if machine is working properly and safely before work begins.
- Always disconnect power supply before changing abrasive/accessory or making machine adjustments.
- Inspect abrasives/accessories for damage or defects prior to installation on tools.
- Please refer to Dynabrade's Warning/Safety Operating Instructions Tag (Reorder No. **95903**) for more complete safety information.
- **Warning:** Hand, wrist and arm injury may result from repetitive work, motion and overexposure to vibration.

## Notice

All Dynabrade motors use the highest quality parts and metals available and are machined to exacting tolerances. The failure of quality pneumatic motors can most often be traced to an unclean air supply or the lack of lubrication. Air pressure easily forces dirt or water contained in the air supply into motor bearings causing early failure. It often scores the cylinder walls and the rotor blades resulting in limited efficiency and power. Our warranty obligation is contingent upon proper use of our tools and cannot apply to equipment which has been subjected to misuse such as unclean air, wet air or a lack of lubrication during the use of this tool.

## One Year Warranty

Following the reasonable assumption that any inherent defect which might prevail in a product will become apparent to the user within one year from the date of purchase, all equipment of our manufacture is warranted against defects in workmanship and materials under normal use and service. We shall repair or replace at our factory, any equipment or part thereof which shall, within one year after delivery to the original purchaser, indicate upon our examination to have been defective. Our obligation is contingent upon proper use of Dynabrade tools in accordance with factory recommendations, instructions and safety practices. It shall not apply to equipment which has been subject to misuse, negligence, accident or tampering in any way so as to affect its normal performance. Normally wearable parts such as bearings, contact wheels, rotor blades, etc., are not covered under this warranty.

| Model Number | Motor HP (W) | Motor RPM | Sound Level | Air Flow Rate CFM/SCFM (LPM) | Air Pressure PSIG (Bars) | Spindle Thread | Weight Pound (kg) | Length Inch (mm) | Height Inch (mm) |
|--------------|--------------|-----------|-------------|------------------------------|--------------------------|----------------|-------------------|------------------|------------------|
| 51470        | .7 (522)     | 0-2,000   | 82 dB(A)    | 6/43 (1,218)                 | 90 (6.2)                 | 5/8"-11 male   | 4.8 (2.2)         | 13 (330)         | 3-1/8 (79)       |
| 51472        | .7 (522)     | 0-3,000   | 80 dB(A)    | 6/41 (1,161)                 | 90 (6.2)                 | 5/8"-11 male   | 4.8 (2.2)         | 13 (330)         | 3-1/8 (79)       |

Additional Specifications: Air Inlet Thread 1/4" NPT • Hose I.D. Size 3/8" (10 mm)

# **Disassembly/Assembly Instructions - Sander/Polisher**

**Important:** Manufacturer's warranty is void if tool is disassembled before warranty expires.  
Please refer to parts breakdown for part identification.

## **Motor and Gear Casing Disassembly:**

1. **Important:** Inlet adapter must be secured before attempting to remove air fitting to avoid damaging composite motor housing.
2. Disconnect tool from power source, and secure motor housing, using the two molded flats, in a padded vise.
3. Remove **50970** Gear Casing Assembly using 40 mm wrench flats provided.
4. Remove **04014** Set Screw from gear casing.
5. Push **50956** Hex Adapter through **50970** Gear Casing Assembly.
6. Remove **02552** Bearing from planetary assembly (opposite end from hex adapter).
7. Remove **53191** Ring Gear and spur gears from **53180** Planetary Carrier.
8. Secure planetary carrier in vise and remove **50956** Hex Adapter. Press carrier through **02552** Bearing.
9. Grab onto pinion gear and pull **53169** Motor Assembly from motor housing.
10. Secure **01028** Cylinder and press **04017** Rotor through **01721** Rear Bearing Plate.
11. Press **04017** Rotor through **53183** Front Bearing Plate and remove **01010** Spacer, **01007** Bearing and shims.

**Motor Disassembly Complete.**

## **Motor Housing Disassembly:**

1. Secure motor housing, using the two molded flats in a padded vise, with the air inlet facing upwards.
2. Remove **94519** Muffler Assembly from motor housing.
3. Remove **01564** Air Control Ring, **01468** Spring, **01472** Tip Valve and **01464** Seal from motor housing.
4. Using a 2.5 mm drift pin, tap **01017** Spring from housing and remove **01089** Throttle Lever and **01477** Valve Stem.
5. Remove **95558** Retaining Ring. Push **01247** Speed Regulator Assembly from housing.

**Motor Housing Disassembly Complete.**

## **Right-Angle Housing and Spindle Disassembly:**

1. Secure housing in a padded vise, and remove **50987** Lock Ring (left-hand thread) using 44 mm wrench flats.
2. Remove **50951** Coupler and pull **53351** Coupling Nut and pinion assembly from housing.
3. Secure pinion in a padded vise and remove **53551** Coupling Nut, remove **01266** Bearing, **50986** Spacer and shims.
4. Secure **01266** Bearing and push **50985** Pinion Shaft through pinion and bearing, remove **50435** Key.
5. Secure housing in a padded vise with spindle facing upwards.
6. Remove **50963** Retainer using an adjustable pin wrench (left-hand thread).
7. Pull spindle assembly from angle-housing. Remove shims and **02048** Wick from housing.
8. Secure **50887** Bearing and push spindle through bevel gear and bearing.
9. Remove **96325** Shell Bearing using **57099** Bearing Puller.

**Angle-Housing Disassembly Complete.**

## **Motor and Gear Casing Assembly:**

**Important:** Be sure parts are clean and in good repair before assembling. Follow all grease, oil, and torque specifications.

1. Place **04017** Rotor in padded vise with threaded spindle facing upwards.
2. Slip **01010** Spacer onto **04017** Rotor.
3. Place a .002" shim into **53183** Front Bearing Plate as an initial spacing and slip **01007** Bearing into plate. **Note:** **01121** Shim Pack contains .001" and .002" shims.
4. Press bearing/bearing plate assembly onto rotor.
5. Check clearance between rotor and bearing plate by using a .001" feeler gauge. Clearance should be at .001" to .0015". Adjust clearance by repeating steps 2-4 with different shim if necessary.
6. Once proper rotor gap clearance is achieved, install well lubricated **01185** Blades (4) into rotor slots. Dynabrade recommends using their **95842** Air Lube.
7. Install cylinder over rotor/pinion. Be sure air inlet holes of cylinder face away from **53183** Front Bearing Plate.
8. Press **02649** Rear Bearing into rear bearing plate. Press bearing/bearing plate assembly onto rotor. Be sure that pin and air inlet holes line up with pin slot and air inlet holes in cylinder.  
**Important:** Fit must be snug between bearing plates and cylinder. If too tight, rotor will not turn freely. Rotor must then be lightly tapped at press fit end so it will turn freely while still maintaining a snug fit. A loose fit will not achieve the proper preload of motor bearings.
9. Secure motor housing in padded vise so motor cavity faces upwards. Install motor assembly into housing. Be sure motor inlet is facing the handle and it drops all the way into housing.
10. Press front **02552** Bearing onto front end of **53180** Planetary Carrier.
11. Apply #271 Loctite® to **50956** Hex Adapter and install onto **53180** Planetary Carrier (torque 17.0 N•m/150 in. - lbs.).
12. Install **53193** Gears, **04026** Bearings and **53182** Gear Shafts onto planetary carrier.
13. Slip **53191** Ring Gear over gears and press rear **02552** Bearing onto planetary carrier.
14. Install planetary carrier assembly into **50970** Gear Casing by aligning the slot in **53191** Ring Gear with set screw hole.
15. Apply #567 Loctite® (or equivalent) to **04014** Set Screw and install into **50970** Gear Casing.
16. Apply two drops of #271 Loctite® adhesive to motor housing threads.
17. Install gear casing sub-assembly onto motor housing to secure motor, torque 28 N•m/250 in-lbs.

## Disassembly/Assembly Instructions - Sander / Polisher (continued)

### Motor Housing Assembly:

1. Insert **01247** Regulator with o-rings and valve stem, place into motor housing. Secure with **95558** Retaining Ring.
2. Secure valve body in padded vise with inlet facing upwards. Insert **01464** Seal.
3. Line up hole in valve stem with hole in housing (looking past brass bushing). Insert **01472** Tip Valve so that the metal pin passes through the hole in the valve stem. Install **01468** Spring (small end towards tip valve).
4. Assemble felt muffler and place in **94522** Muffler Cap. Install **94521** Muffler Base onto muffler cap.
5. Install **94538** O-Ring into groove on muffler base. Place **95375** O-Ring and **94526** Spacer into recessed area of muffler cap.
6. Slip **94523** Inlet Adapter through muffler assembly and install **95711** Retainer Ring into groove on inlet adapter.
7. Install **01564** Air Control Ring into valve body housing.
8. Apply #567 Loctite® Pipe Sealant to threads of **94523** Inlet Adapter and install entire muffler assembly onto valve body (torque 23.0 N•m/200 in-lbs.).
9. Replace air fitting. Secure inlet adapter with a wrench before tightening air fitting. Install throttle lever and **01017** Pin.

### Right-Angle Housing and Spindle Assembly:

1. Secure **50985** Pinion Shaft in padded vise with key slot end up. Install **02552** Bearing onto pinion shaft.
2. Press pinion gear onto pinion shaft with **50435** Key in key slot. Replace **95939** Retaining Ring.
3. Secure pinion in padded vise and install **50986** Spacer, **01266** Bearing and **53551** Coupling Nut.
4. The **50986** Spacer must fit snug between the two **01266** Bearings (shim required to achieve a snug fit).
5. Apply #271 Loctite® adhesive to spindle thread and install **53551** Coupling Nut (torque 17 N•m/150 in-lbs.).
6. Install **96235** Shell Bearing into angle housing and insert pinion/shaft assembly.
7. Apply #567 Loctite® to angle housing and install **50987** Lock Ring (left-hand thread, 44 mm wrench flats).
8. Insert **50951** Coupling over **53551** Coupling Nut.
9. Install **50987** Lock Ring and angle housing sub-assembly onto **50970** Gear Casing. Take care in the aligning of the two male hex adapters to the **50951** Coupling (torque 45 N•m/400 in-lbs.).
10. Press **50887** Bearing and bevel gear onto spindle assembly.
11. Secure angle housing with drive spindle cavity facing upward and install well lubricated **02048** Wick (wick must be completely saturated with **95848** Gear Oil before installation). **Note:** Do not contaminate wick with any other oil or grease product.
12. Insert spindle assembly and check for gear alignment and backlash. Install shims as required (Minimum backlash is recommended for maximum gear life. Make sure there is clearance throughout 360° revolution.).
13. Install **50963** Retainer with **50899** Shaft Seal in place (left-hand thread), torque 34 N•m/300 in-lbs.

**Tool Assembly Complete. Please allow 30 minutes for adhesives to cure before operating tool.**

**Important:** Motor should now be tested for proper operation at 90 PSIG. If motor does not operate properly or operates at a higher RPM than marked on the tool, the tool should be serviced to correct the cause before use. Before operating, place 2-3 drops of Dynabrade Air Lube (P/N **95842**) directly into air inlet with throttle lever depressed. Operate tool for 30 seconds to determine if tool is operating properly and to allow lubricating oils to properly penetrate motor.

Loctite® is a registered trademark of Loctite Corp.

## Accessories



### 96178 Motor Tune-Up Kit

- Includes assorted parts to help maintain and repair motor.



### Dynabrade Air Lube (10W/NR)

- Formulated for pneumatic equipment.
  - Absorbs up to 10% of its weight in water.
  - Prevents rust and formation of gum/sludge for longer tool operation with greater power and less downtime.
- 95821:** 4 oz. (118 ml). **95842:** 1 pt. (473 ml).  
**95843:** 1 gal. (3.8 L).



### Dynabrade Angle Gear Oil

- Specifically formulated to saturate wick system in right angle gear head.
- 95848:** 2 oz. (56.7 g) tube.  
**95849:** 10 oz. (283.5 g) tube.

### 50790 Dynabrade Lubrication Accessory Kit

- Includes: **95848:** Gear Oil 2 oz. tube.  
**95542:** Grease 1 pt. (473 ml).  
**95541:** Lubricant Gun (2).



### Grease

- Multi-purpose grease for all types of bearings, cams, gears.
  - High film strength; excellent resistance to water, steam, etc.
  - Workable range 0° F to 300° F.
- 95541:** Push-type Grease Gun (one-hand operation).  
**95542:** 10 oz. (283.5 g) tube.



### 57099 Bearing Puller

- This tool is designed to assist in removing the **96325** Bearing from the angle housing assembly.

### Dry/Wet Disc Pads

- 50828** - 6" Dia, Soft, Rubber Face  
**50829** - 8" Dia, Soft, Rubber Face  
**50884** - 5" Dia, Rigid, Hook-Face  
**50946** - 6" Dia, Rigid, Hook-Face  
**50947** - 8" Dia, Rigid, Hook-Face  
**54337** - 8" Dia, Soft, Hook-Face  
• 5/8" - 11 female thread.



**50984** Top Handle Assy.



Visit Our Web Site: [www.dynabrade.com](http://www.dynabrade.com)

Email: [Customer.Service@Dynabrade.com](mailto:Customer.Service@Dynabrade.com)

**DYNABRADE, INC.,** 8989 Sheridan Drive • Clarence, NY 14031-1490 • Phone: (716) 631-0100 • Fax: 716-631-2073 • International Fax: 716-631-2524  
**DYNABRADE EUROPE S.à.r.l.,** Zone Artisanale • L-5485 Wormeldange—Haut, Luxembourg • Telephone: 352 76 84 94 1 • Fax: 352 76 84 95 1

© DYNABRADE, INC., 2002

PRINTED IN USA