

Electric Random Orbital Sander

Tool Manual – Safety, Operation and Maintenance

SAVE THIS DOCUMENT, EDUCATE ALL PERSONNEL

Models:

- 59306 – 5" Dia. Pad, 3/8" Orbit
- 59307 – 5" Dia. Pad, 3/16" Orbit
- 59308 – 6" Dia. Pad, 3/8" Orbit
- 59309 – 6" Dia. Pad, 3/16" Orbit


All Models are Central Vacuum-Ready



⚠ WARNING

Read and understand this tool manual before operating your tool. Follow all safety rules for the protection of operating personnel as well as adjacent areas. For safety information, refer to Safety Requirements for the Use, Care and Protection of Abrasive Wheels – ANSI B7.1, Code of Federal Regulation – CFR 29 Part 1910, Safety Requirements and applicable State and Local Regulations.

SAFETY LEGEND

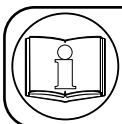

⚠ WARNING

Read and understand tool manual before work starts to reduce risk of injury to operator, visitors, and tool.

⚠ WARNING

Practice safety requirements. Work alert, have proper attire, and do not operate tools under the influence of alcohol or drugs.



⚠ WARNING

Eye protection must be worn at all times, eye protection to conform to ANSI Z87.1.

⚠ WARNING

Ear protection to be worn when exposure to sound, exceeds the limits of applicable Federal, State or local statutes, ordinances and/or regulations.



⚠ WARNING

Respiratory protection to be used when exposed to contaminants that exceed the applicable threshold limit values required by law.

⚠ WARNING

Electric shock hazard. Avoid bodily contact with grounded objects, bodies of water. Do not damage cord set.



⚠ WARNING

Some dust created by sanding, grinding, drilling, and other construction activities contain chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints
- Crystalline silica from bricks and cement and other masonry products
- Arsenic and chromium from chemically treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

Caution: Hand, wrist and arm injury may result from repetitive work, motion and overexposure to vibration.

Tool Intent: Dynabrade Electric Random Orbital Sanders are used to sand; wood, metal, stone, fiberglass or plastic surfaces.

GENERAL SAFETY RULES

WARNING! Read and understand all instructions. Failure to follow all instructions listed below, may result in electric shock, fire and /or serious personal injury.

SAVE THESE INSTRUCTIONS

Work Area

1. Keep your work area clean and well lit. Cluttered benches and dark areas invite accidents.
2. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Power tools create sparks which ignite the dust or fumes.
3. Keep bystanders, children, and visitors away while operating a power tool. Distractions can cause you to lose control.

Electrical Safety

1. Double Insulated tools are equipped with a polarized plug (one blade is wider than the other.) This plug will fit in polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a polarized outlet. Do not change the plug in any way. Double Insulation ☐ eliminates the need for the three wire grounded power cord and grounded power supply system.
2. Avoid body contact with grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is grounded.
3. Don't expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
4. Do not abuse the cord. Never use the cord to carry the tools or pull the plug from an outlet. Keep cord away from heat, oil, sharp edges or moving parts. Replace damaged cords immediately. Damaged cords increase the risk of electric shock.

(continued on next page)

Electrical Safety (Continued)

5. When operating a power tool outside, use an outdoor extension cord marked "W-A" or "W." These cords are rated for outdoor use and reduce the risk of electric shock.

Personal Safety

1. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use tool while tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating power tools may result in serious personal injury.
2. Dress properly. Do not wear loose clothing or jewelry. Contain long hair. Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewelry, or long hair can be caught in moving parts.
3. Avoid accidental starting. Be sure switch is off before plugging in. Carrying tools with your finger on the switch or plugging in tools that have the switch on invites accidents.
4. Remove adjusting keys or switches before turning the tool on. A wrench or a key that is left attached to a rotating part of the tool may result in personal injury.
5. Do not overreach. Keep proper footing and balance at all times. Proper footing and balance enables better control of the tool in unexpected situations.
6. Use safety equipment. Always wear eye protection. Dust mask, non-skid safety shoes, hard hat, or hearing protection must be used for appropriate conditions.

Tool Use and Care

1. Use clamps or other practical way to secure and support the workpiece to a stable platform. Holding the work by hand or against your body is unstable and may lead to loss of control.
2. Do not force tool. Use the correct tool for your application. The correct tool will do the job better and safer at the rate for which it is designed.
3. Do not use tool if switch does not turn it on or off. Any tool that cannot be controlled with the switch is dangerous and must be repaired.
4. Disconnect the plug from the power source before making any adjustments, changing accessories, or storing the tool. Such preventative safety measures reduce the risk of starting the tool accidentally.
5. Store idle tools in a high, dry place, locked up out of reach of children and other untrained persons. Tools are dangerous in the hands of untrained users.
6. Maintain tools with care. Keep cutting tools sharp and clean. Properly maintained tools, with sharp cutting edges are less likely to bind and are easier to control.
7. Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the tools operation. If damaged, have the tool serviced before using. Many accidents are caused by poorly maintained tools.
8. Use only accessories that are recommended by the manufacturer for your model. Accessories that may be suitable for one tool, may become hazardous when used on another tool.
9. Use the right tool. Do not force small tools or attachments to do the job of a heavy duty tool.

Service

1. Tool service must be performed only by qualified repair personnel. Service or maintenance performed by unqualified personnel could result in a risk of injury.
2. When servicing a tool, use only identical replacement parts. Follow instructions in the Maintenance section of this manual. Use of unauthorized parts or failure to follow Maintenance Instructions may create a risk of electric shock or injury.

SPECIFIC SAFETY RULES

1. Accessories must be rated for at least the speed recommended on the tool warning label. Wheels and other accessories running over rated speed can fly apart and cause injury.
2. Hold tool by insulated gripping surfaces when performing an operation where the tool may contact hidden wiring or its own cord. Contact with a "live" wire will make exposed metal parts of the tool "live" and shock the operator.

(See Definitions of label symbols on pg. 4)

TOOL DESCRIPTION

Random Orbital Sander – Is a right angle electric hand tool with a 5/8"-11 spindle which includes: an on/off switch, side handle, a random orbital head assembly, a vacuum shroud, and is equipped with a 8 ft. cord set.

ASSEMBLY and OPERATION INSTRUCTIONS

1. With power source disconnected from tool, securely fasten abrasive/accessory on tool with the wrench provided. The rated RPM of the accessory must be equal to or greater than the rated RPM of the tool.
2. Check to make sure the switch is in the off position and connect power source to tool.
3. Hold tool by the motor housing and the side handle. Do Not hold tool by head/housing assembly. Keep hands away from all sanding edges and moving parts.
4. Push, slide switch forward to start tool. Depress rear of slide switch to disengage tool.

MAINTENANCE and ACCESSORY CARE INSTRUCTIONS

Important: A preventative maintenance program is recommended whenever portable power tools are used.

- Use only genuine Dynabrade replacement parts to insure quality. To order replacement parts, specify **Model #**, **Serial #** and **RPM** of your tool.


Routine Preventative Maintenance:

- Mineral spirits are recommended when cleaning the angle head. Do not use on electrical components or clean tool or parts with any solvents or oils containing acids, esters, ketones, chlorinated hydrocarbons or nitro carbons. Compressed air may be used to remove dirt from electrical components.
- **DO NOT** clean or maintain tools with chemicals that have a low flash point (example: WD-40®).
- Tool label must be kept legible at all times, if not, reorder Tool Specification Label and replace. User is responsible for maintaining specification information i.e.: Model #, S/N, and RPM. (See Assembly Breakdown)
- Visually inspect plugs and cords for frays, visible damage and signs of deterioration. Damaged or worn components must be replaced by qualified service personnel.
- Brush Changing – Unplug tool, cut both Dynabrade logo labels along housing joint, remove **89343** Screw and remove rear cover. Bend brass tab on brush holders up and remove brushes. Install new brushes, bend tabs down and replace rear cover. Brush changing – Change brushes every 100 hrs. to ensure proper tool function. After changing brushes, it is recommended to replace the right angle gear grease with **95542 Grease**.
- After maintenance is performed on tool check for excessive tool vibration.
- Check for excessive current leakage at 550 volts with a current leakage checker on all screws and the gear case, if the electrical components have been disturbed during repair.

Handling and Storage of Tool and Accessories:

- Use of tool rests, hangers and/or balancers is recommended. Bench mounts are **NOT** to be used.
- **DO NOT** carry tool by cord.
- Protect abrasive accessories from exposure to water, solvents, high humidity, freezing temperature and extreme temperature changes.
- Store accessories in protective racks or compartments to prevent damage.

Complete Motor Assembly

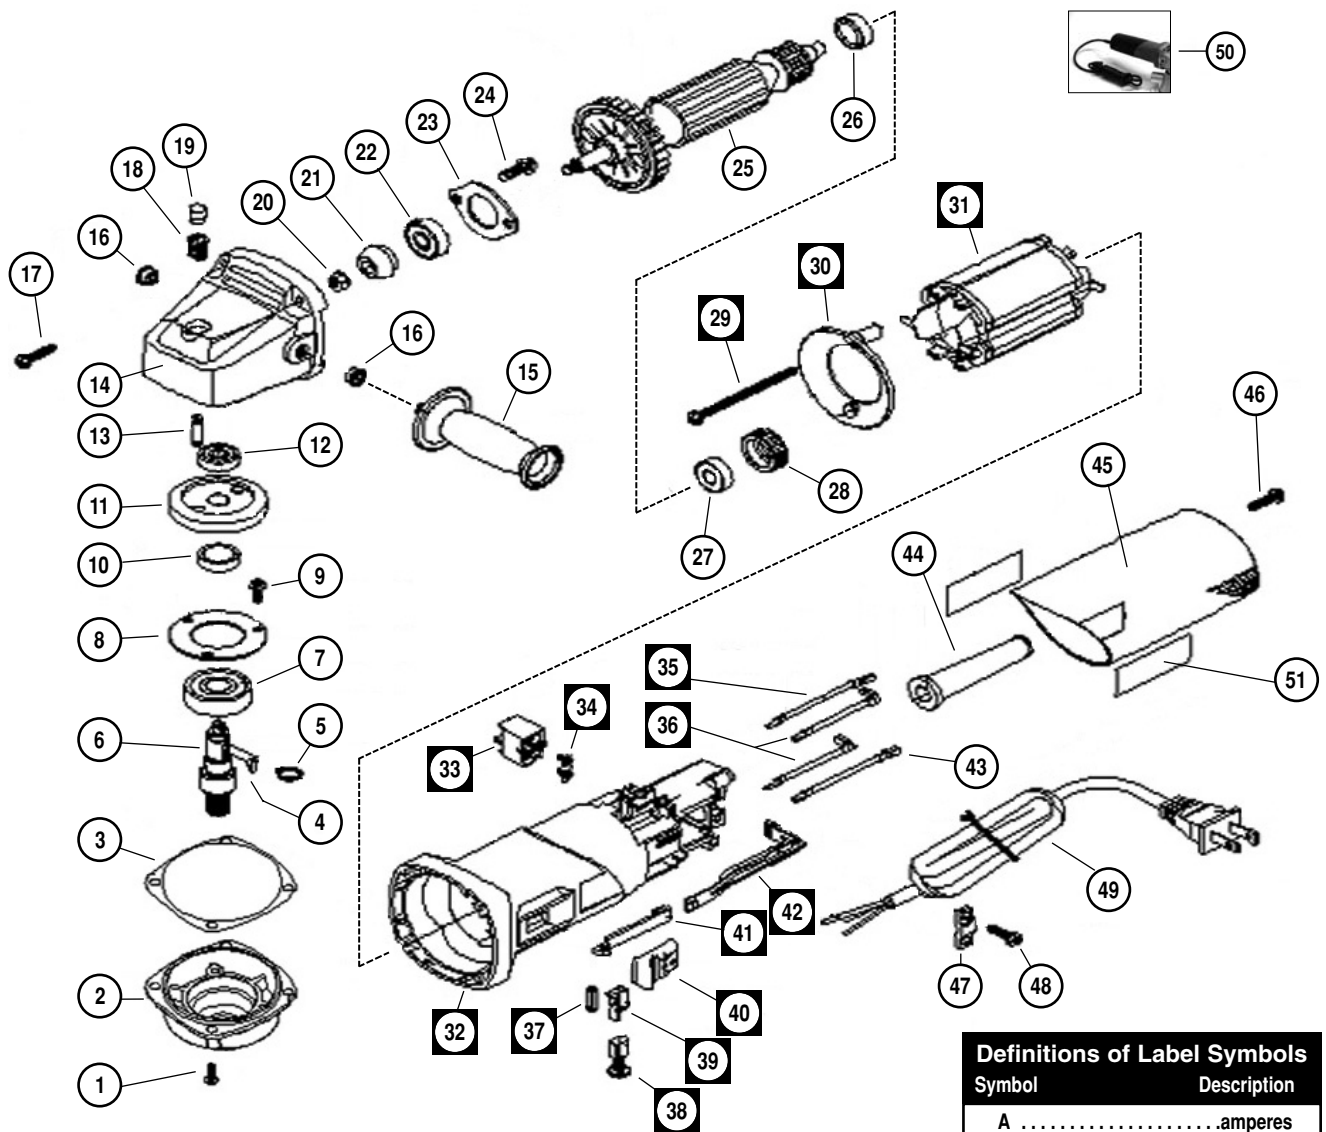

Definitions of Label Symbols	
Symbol	Description
A	amperes
Hz	hertz
□	Class II Construction
n_0	no load speed
.../min	revolutions per min.


Boxed index numbers represent 89326 Motor Housing Assembly.

Index Key

No.	Part #	Description	No.	Part #	Description	No.	Part #	Description	No.	Part #	Description
1	89300	Screw (4)	15	89351	Side Handle	29	89327	Screw (2)	43	89341	Wire - White
2	89360	Gear Case Cover	16	89312	Plug (2)	30	89328	Fan Baffle	44	89346	Cord Protector
3	89350	Shim	17	89313	Screw (4)	31	89329	Field	45	89348	Rear Cover
4	89303	Woodruff Key	18	89315	Spring	32	89330	Motor Housing	46	89343	Screw
5	89302	Retaining Ring	19	89316	Button	33	89331	Switch	47	89344	Cord Clamp
6	89361	Spindle (5/8"-11)	20	89317	Nut	34	89332	Screw (2)	48	89349	Screw
7	50677	Bearing	21	89318	Spiral Bevel Pinion	35	89339	Wire - Black	49	89345	Power Cord
8	89306	Bearing Retainer	22	89319	Bearing	36	89340	Wire - Red (2)	50	Label	
9	89307	Screw (3)	23	89320	Bearing Retainer	37	89335	Pin	40436	Model - 59306	
10	89308	Gear Spacer	24	89321	Screw (2)	38	89342	Brush (2)	40437	Model - 59307	
11	89309	Spiral Bevel Gear	25	89322	Armature Assembly	39	89334	Brush Holder (2)	40438	Model - 59308	
12	01015	Bearing	26	89323	Washer	40	89336	On/Off Switch	40439	Model - 59309	
13	89311	Shaft Lock Pin	27	89324	Bearing	41	89337	Drawbar	51	40402	Label (2)
14	89314	GearBox Housing	28	89325	Bearing Holder	42	89338	Drawbar			

To order replacement parts, specify model number and serial number of your machine.

Random Orbital/Shroud Assemblies

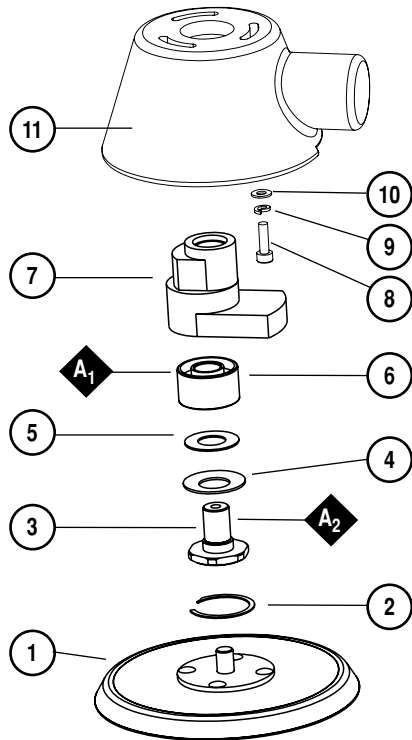

Definitions of Label Symbols

Symbol	Description
A	amperes
Hz	hertz
□	Class II Construction

KEY
A Loctite: **A₁ = Loctite #609**
A₂ = Loctite #271

Index Key

No.	Part #	Description
1	56104	5" - Vacuum Pad (Vinyl)
	56105	6" - Vacuum Pad (Vinyl)
2	95630	Snap Ring
3	57069	Shaft Balancer
4	95628	Washer
5	56053	Felt Washer
6	56052	Bearing
7	Counter Balance	
	54563	5" Model, 3/8" Orbit
	54564	6" Model, 3/8" Orbit
	54555	5" Model, 3/16" Orbit
	54556	6" Model, 3/16" Orbit
8	01678	Screw (3)
9	01211	Lockwasher (3)
10	95886	Washer (3)
11	54559	Vacuum Shroud


One Year Warranty

Following the reasonable assumption that any inherent defect which might prevail in a product will become apparent to the user within one year from the date of purchase, all equipment of our manufacture is warranted against defects in workmanship and materials under normal use and service. We shall repair or replace at our factory, any equipment or part thereof which shall, within one year after delivery to the original purchaser, indicate upon our examination to have been defective. Our obligation is contingent upon proper use of Dynabrade tools in accordance with factory recommendations, instructions and safety practices. It shall not apply to equipment which has been subject to misuse, negligence, accident or tampering in any way so as to affect its normal performance. Normally wearable parts such as bearings, brushes, gears, etc., are not covered under this warranty.

Machine Specifications

Model Number	Motor RPM	Pad Diameter Inch (mm)	Voltage	Current	Phase	Frequency	Weight Pound (kg)	Length Inch (mm)	Height Inch (mm)
5" Models	11,600	5 (127)	120 V (AC)	6.7 Amps	1	60 Hz	5 (2.3)	12 (305)	5-1/2 (140)
6" Models	11,600	6 (152)	120 V (AC)	6.7 Amps	1	60 Hz	5 (2.3)	12-1/2 (318)	5-1/2 (140)

Wiring Diagram

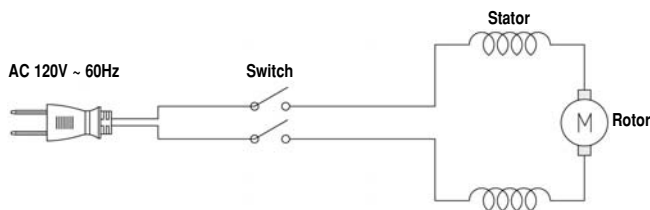

Optional Accessories

FIND THE MOST CURRENT OFFERING OF ACCESSORIES AND SUPPORT DOCUMENTS @ WWW.DYNABRADE.COM



95542 Grease 10 oz.

- High film strength; excellent resistance to water, steam, etc.
- Workable range 0° F to 300° F.

Reference Contact Information

1. CSA International
 8501 East Pleasant Valley Road
 Cleveland, Ohio 4431-5575
 Tel: 1 (216) 524-4990
 Fax: 1 (216) 642-3463

2. Government Printing Office – GPO
 Superintendent of Documents
 Attn. New Orders
 P.O. Box 371954
 Pittsburgh, PA 15250-7954
 Tel: 1 (202) 512-1803

Visit Our Web Site: www.dynabrade.com

Email: Customer.Service@Dynabrade.com



DYNABRADE, INC., 8989 Sheridan Drive • Clarence, NY 14031-1490 • Phone: (716) 631-0100 • Fax: 716-631-2073 • International Fax: 716-631-2524
DYNABRADE EUROPE S.à.r.l., Zone Artisanale • L-5485 Wormeldange—Haut, Luxembourg • Telephone: 352 76 84 94 1 • Fax: 352 76 84 95 1

©DYNABRADE, INC., 2006

PRINTED IN USA